

VOR XUB
112.5

APP CRS
204°

Rwy Idg
5405
TDZE
716
Apt Elev
725

VOR RWY 23
ROSS COUNTY (R/ZT)


▼

NA


When local altimeter setting not received, use Rickenbacker Intl altimeter setting. When VGSI is inop, Straight-in and Circling Rwy 23 procedures NA at night.

MISSED APPROACH: Climb to 3000 then right turn direct XUB VOR and hold.

AWOS-3 119.225	COLUMBUS APP CON 134.0 279.6	UNICOM 122.8 (CTAF)	123.0
-------------------	---------------------------------	------------------------	-------

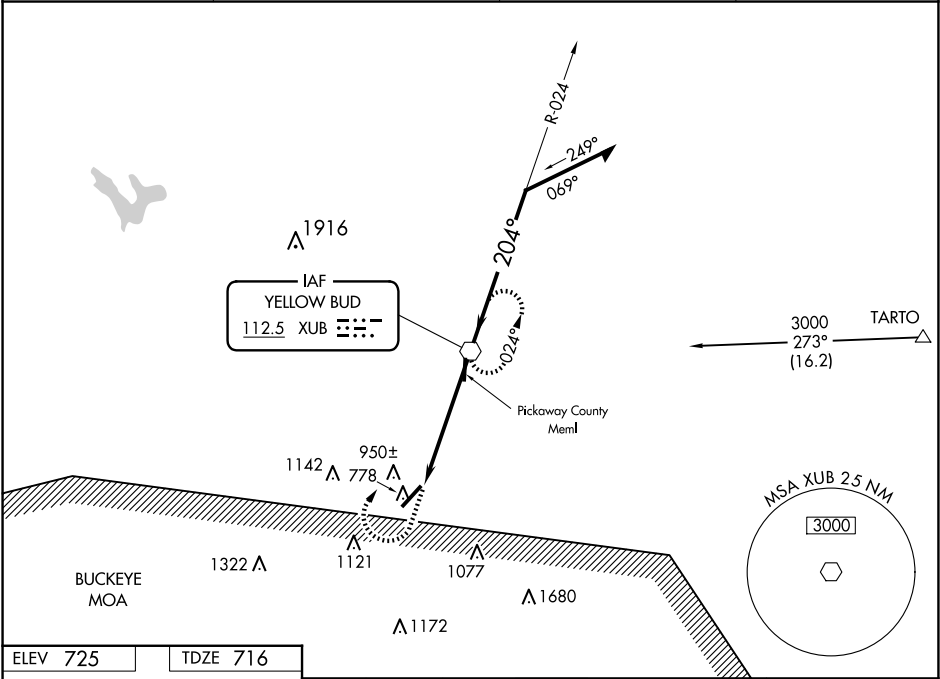

ELEV 725	TDZE 716
----------	----------

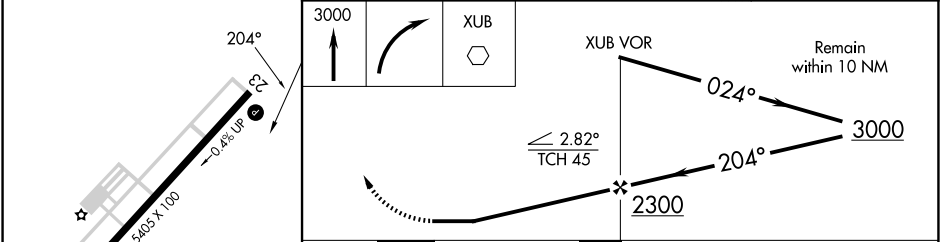

REIL Rwy 5 and 23 MIRL Rwy 5-23	FAF to MAP 5.2 NM			
	Knots	60	90	120
	Min:Sec	5:12	3:28	2:36
		150	180	2:05
RICKENBACKER INTL ALTIMETER SETTING MINIMUMS				
S-23	1280-1	564 (600-1)	1280-1½	564 (600-1½)
CIRCLING	1400-1	675 (700-1)	1560-2½	835 (900-2½)
S-23	1220-1	504 (500-1)	1220-1½	504 (500-1½)
CIRCLING	1340-1	635 (700-1)	1500-2¼	815 (900-2¾)