

APP CRS
158°

Rwy Ldg
TDZE
Apt Elev
N/A
N/A
71

RNAV (GPS)-A
CLEARWATER EXEC (CLW)

RNP APCH-GPS.


▼

▲

Procedure NA at night. Circling NA east of Rwy 16-34. When local altimeter setting not received, use PLE altimeter setting and increase all MDAs 40 feet.

MISSED APPROACH: Climb to 600 then climbing right turn to 2000 direct KABZE and hold.

AWOS-3P 119.225	TAMPA APP CON 125.3 316.05	UNICOM 123.0 (CTAF) 1
---------------------------	--------------------------------------	---------------------------------

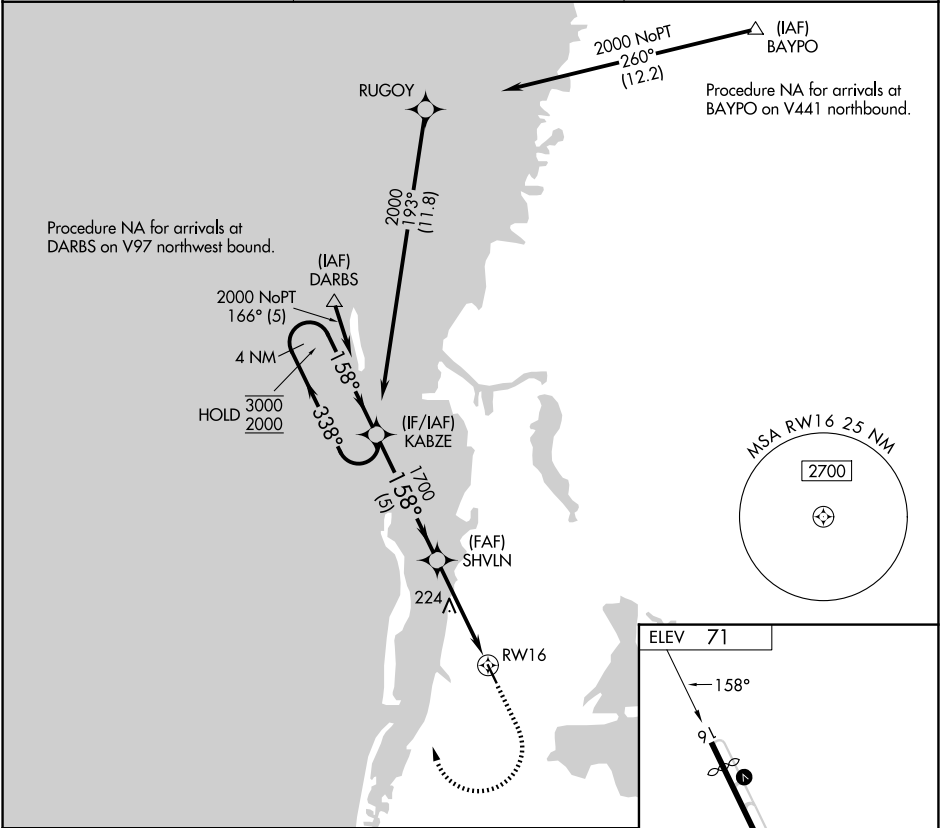

4 NM Holding Pattern

KABZE

SHVLN

RW16

600 2000 KABZE

3000 2000

338° 158° 158°

1700

3.50° TCH 61

5 NM 4.2 NM

CATEGORY

A

B

C

D

CIRCLING

620-1
549 (600-1)

700-1
629 (700-1)

760-2
689 (700-2)

NA

MIRL Rwy 16-34 1