


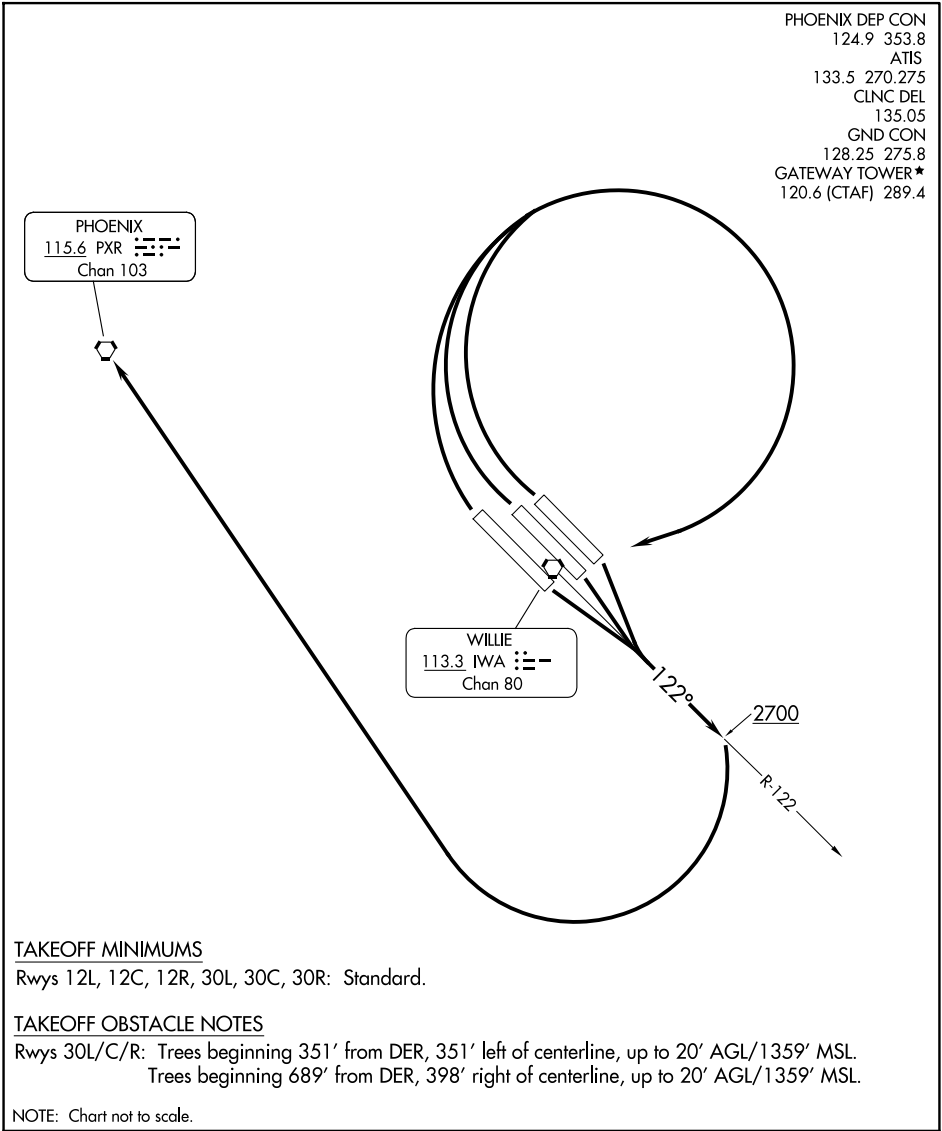

DEPARTURE ROUTE DESCRIPTION

TAKEOFF RUNWAYS 12L/C/R: Climb to 2700 via IWA VORTAC R-122 then right turn direct PXR VORTAC.

TAKEOFF RUNWAYS 30L/C/R: Climbing right turn to 4000 direct IWA VORTAC and IWA VORTAC R-122 then right turn direct PXR VORTAC.