


LOC I-SOU 110.1	APP CRS 013°	Rwy Ldg TDZE Apt Elev	9072 1180 1205
---------------------------	------------------------	-----------------------------	---

ILS or LOC RWY 1


MARQUETTE/SAWYER RGNL (SAW)

DME required for LOC only.		MALSR	MISSED APPROACH: Climb to 1700 then climbing right turn to 3000 on heading 138° and on SAW VOR/DME R-095 to YEXJO INT and hold, continue climb-in-hold to 3000.
NA Autopilot coupled approach NA below 1360 MSL.		AS	

AWOS-3PT 118.375	MINNEAPOLIS CENTER 119.1 290.2	SAWYER TOWER ★ 119.975 (CTAF) 0	GND CON 121.65	UNICOM 122.7
----------------------------	--	--	--------------------------	------------------------

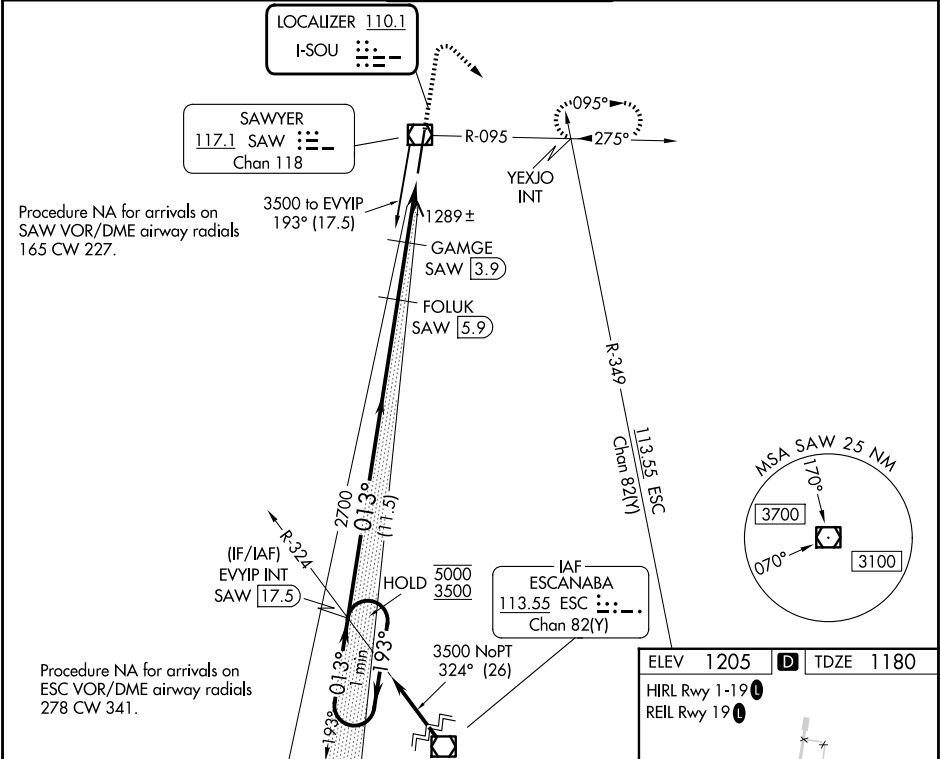

One Minute Holding Pattern EVYIP INT SAW 17.5		1700	3000	SAW R-095	YEXJO INT
5000 ← 193°		2700	hdg 138°		
3500 ← 013°		2040			
GS 3.00° TCH 50					
11.5 NM		2.1 NM	1.5 NM	1.1 NM	
CATEGORY	A	B	C	D	
S-ILS 1	1380-½		200 (200-½)		
S-LOC 1	1580-½		400 (400-½)		
CIRCLING	1680-1		475 (500-1)		

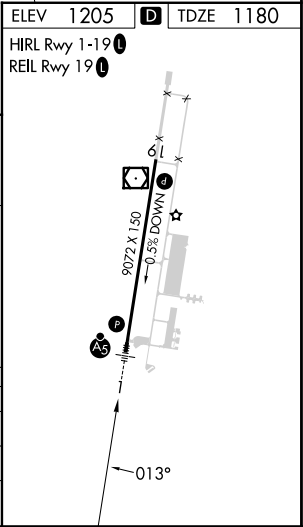

ILS or LOC RWY 1

EC-1, 19 FEB 2026 to 19 MAR 2026

EC-1, 19 FEB 2026 to 19 MAR 2026