


ACONY THREE DEPARTURE (RNAV)

AL-784 (FAA)

SAN JUAN, PUERTO RICO

**TOP ALTITUDE:
5000**


D-ATIS 125.8
 CLNC DEL 126.4 284.6
 CPDLC
 SAN JUAN TOWER 132.05 257.8
 GND CON 121.9 348.6
 SAN JUAN DEP CON 119.4 269.2 (West & SW)
 120.9 290.2 (North & East)

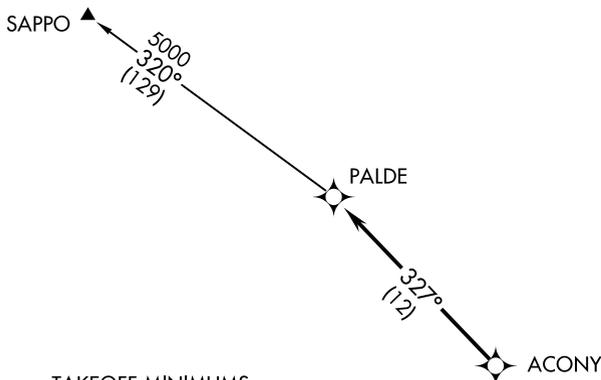

TAKEOFF MINIMUMS

Rwy 8, 10, 26, 28: Standard.

- NOTE: GPS required.
- NOTE: For jet aircraft only.
- NOTE: RNAV 1.
- NOTE: RADAR required.

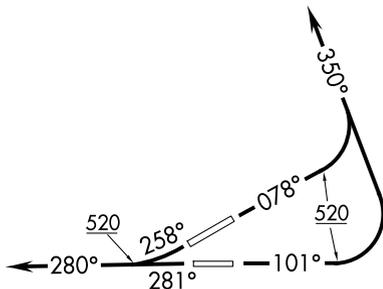

NOTE: Chart not to scale.

DEPARTURE ROUTE DESCRIPTION

TAKEOFF RWY 8: Climb heading 078° to 520, then climbing left turn heading 350° or as assigned by ATC for vectors to ACONY, then on track 327° to PALDE, thence. . . .

TAKEOFF RWY 10: Climb heading 101° to 520, then climbing left turn heading 327° or as assigned by ATC for vectors to ACONY, then on track 327° to PALDE, thence. . . .

TAKEOFF RWY 26: Climb heading 258° to 520, then climb on heading 280° or as assigned by ATC for vectors to ACONY, then on track 327° to PALDE, thence. . . .

TAKEOFF RWY 28: Climb heading 281° to 520, then climb on heading 280° or as assigned by ATC for vectors to ACONY, then on track 327° to PALDE, thence. . . .

. . . .on SAPPO transition, maintain 5000 unless assigned lower altitude. Expect clearance to FL280, or requested altitude if lower, ten minutes after departure.

SAPPO TRANSITION (ACONY3.SAPPO)

ACONY THREE DEPARTURE (RNAV)