


VOR/DME OTZ	APP CRS	Rwy Ldg	5900
115.7	084°	TDZE	13
Chan 104		Apt Elev	15

VOR RWY 9

RALPH WIEN MEML (OTZ) (PAOT)

DME required.	MISSED APPROACH: Climb to 1500 then climbing right turn to 2000 direct OTZ VOR/DME and hold, continue climb-in-hold to 2000.
⚠ Circling Rwy 18, 36 NA at night, Circling Rwy 27 at night, operational VGSi required, remain on or above VGSi glidepath until threshold. Rwy 9 helicopter visibility reduction below RVR 4000 NA.	

AFIS 135.45	ANCHORAGE CENTER 119.2 263.0	KOTZEBUE RADIO 123.6 (CTAF) 0
----------------	---------------------------------	----------------------------------

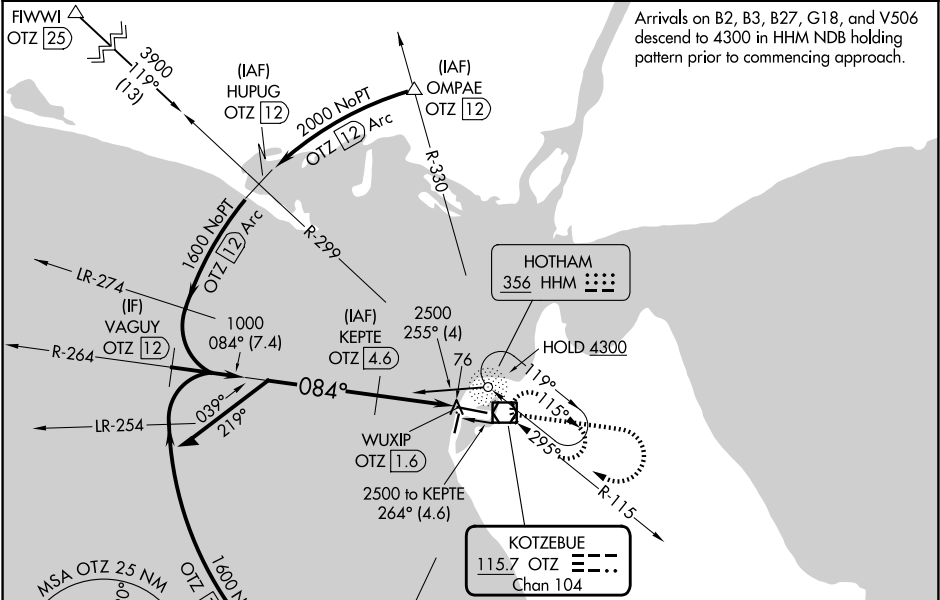

ELEV 15		D TDZE 13	
Remain within 10 NM		KEPTE OTZ 4.6	
1500		264°	
084°		1000	
3.00° TCH 42		OTZ 2.5	
2.1 NM		0.9	
WUXIP OTZ 1.6		3874 x 90	
CATEGORY		A B C D	
S-9		340/55 327 (400-1)	
CIRCLING		520-1 505 (600-1)	
		720-2 705 (800-2)	
		720-2 1/4 705 (800-2 1/4)	
		REIL Rwy 9 and 27	
		HIRL Rwy 9-27	
		MIRL Rwy 18-36	

VOR RWY 9