


LOC I-PAU 109.9	APP CRS 360°	Rwy Ldg TDZE Apt Elev 6500 47 66
---------------------------	------------------------	--

ILS or LOC RWY 36

ST PAUL ISLAND(SNP)(PASN)

ADF and DME required for procedure entry. DME required.	MALSF	MISSED APPROACH: Climb to 2700 on I-PAU north course (360°) to EVANN/SPY 5.2 DME and hold, continue climb-in-hold to 2700.
▼ ▲ Circling NA west of Rwy 18-36. Inop table does not apply to S-ILS. When local altimeter setting not received, procedure NA. DME from SPY NDB/DME. Simultaneous reception of I-PAU and SPY DME required.	▼ ▲	

ASOS 135.75	ANCHORAGE CENTER 119.1 339.8	CTAF 122.3 0
-----------------------	--	------------------------

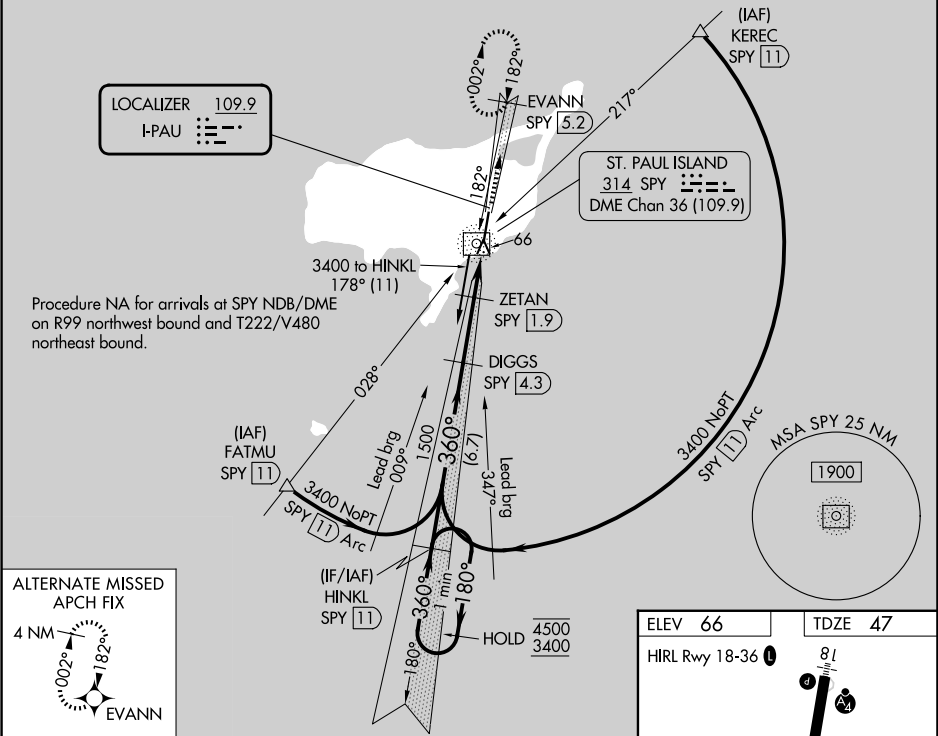

One Minute Holding Pattern	4500 3400 GS 3.00° TCH 50				2700 I-PAU N crs (360°) EVANN SPY (5.2)			
	360° 180° 360° 1500 1480 6.7 NM 2.4 NM 1 NM 1 NM				*LOC only *SPY 0.9 SPY 0.3 *720			
CATEGORY	A	B	C	D				
S-ILS 36	247- ³ / ₄ 200 (200- ³ / ₄)							
S-LOC 36	380- ³ / ₄ 333 (400- ³ / ₄)							
CIRCLING	800-1 734 (800-1)		800-2 734 (800-2)		800-2 ¹ / ₄ 734 (800-2 ¹ / ₄)			

