(ROCKI7.DEN) 12JUN25

(ROCKI7.DEN)
ROCKIES SEVEN DEPARTURE

ROCKIES SEVEN DEPARTURE

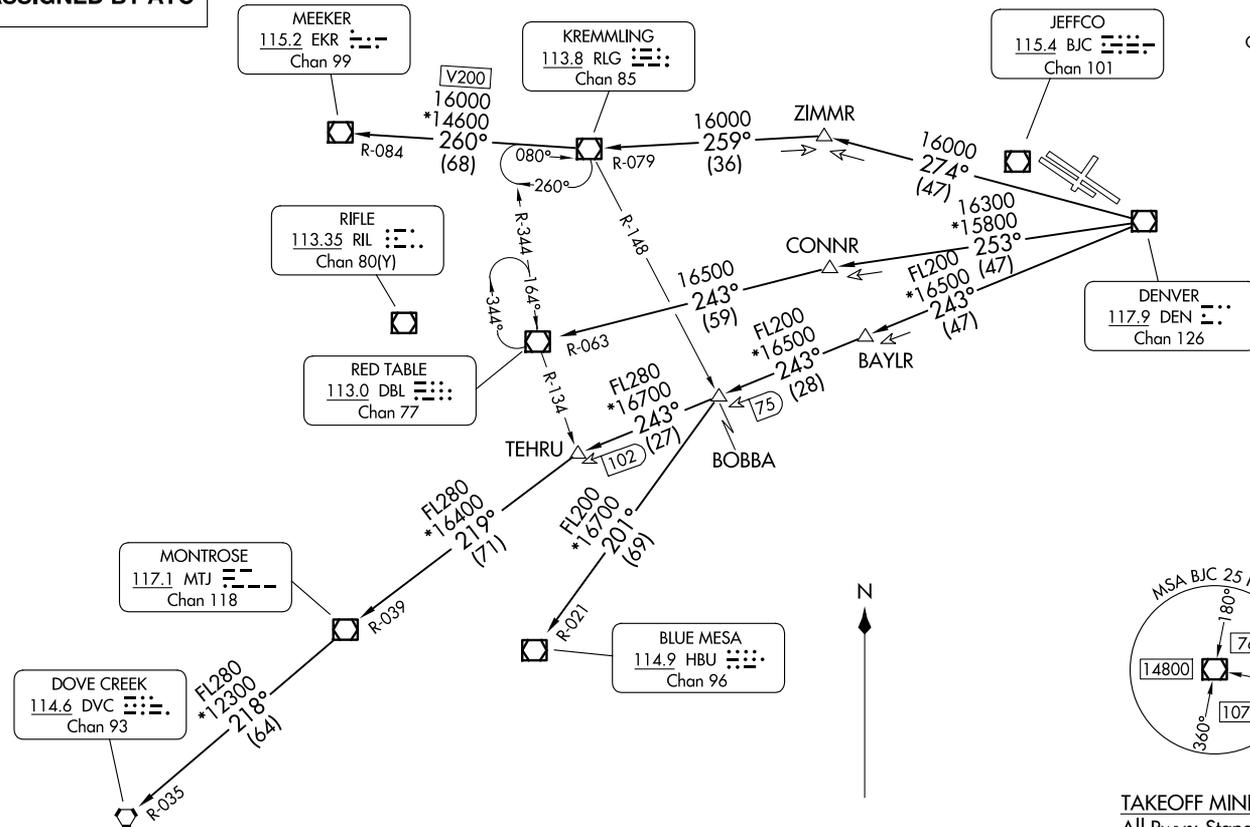(ROCKI7.DEN) 26022

AL-5612 (FAA)

DENVER, COLORADO
ROCKY MOUNTAIN METRO (BJC)

DENVER, COLORADO
ROCKY MOUNTAIN METRO (BJC)

TOP ALTITUDE:
ASSIGNED BY ATC

RADAR required.

DENVER DEP CON
125.125 263.025
ATIS
126.25
CLNC DEL
132.6

MEEKER
115.2 EKR
Chan 99
R-084

KREMMLING
113.8 RLG
Chan 85
R-079

JEFFCO
115.4 BJC
Chan 101

V200
16000
*14600
260°
(68)

080°
260°

16000
259°
(36)

ZIMMR

16000
274°
(47)

R-148

DENVER
117.9 DEN
Chan 126

RIFLE
113.35 RIL
Chan 80(Y)

R-344
164°
344°

CONNR

16500
243°
(59)

16300
*15800
253°
(47)

FL200
*16500
243°
(47)

RED TABLE
113.0 DBL
Chan 77

R-063
R-134

FL200
*16500
243°
(28)

BAYLR

FL280
*16700
243°
(27)

102

TEHRU

75

BOBBA

FL280
*16400
219°
(71)

MONTROSE
117.1 MTJ
Chan 118
R-039

FL200
*16700
201°
(69)

R-021

BLUE MESA
114.9 HBU
Chan 96

N

DOVE CREEK
114.6 DVC
Chan 93

FL280
*12300
218°
(64)

R-035

MSA BJC 25 NM
180°
7600
270°
14800
10700
360°

TAKEOFF MINIMUMS
All Rwys: Standard.

NOTE: Chart not to scale.

(CONTINUED ON FOLLOWING PAGE)

▼

DEPARTURE ROUTE DESCRIPTION

TAKEOFF RUNWAY 3: Climb to assigned altitude and heading between 350° CW 150° from DER, thence. . . .

TAKEOFF RUNWAYS 12L/R: Climb to assigned altitude and heading between 150° CCW 350° from DER, thence. . . .

TAKEOFF RUNWAY 21: Climbing left turn to assigned altitude and heading between 150° CCW to 024° from DER, thence. . . .

TAKEOFF RUNWAYS 30L/R: Climbing right turn to assigned altitude and heading between 350° CW 113° from DER, thence. . . .

. . . . RADAR vectors to assigned route. Expect filed altitude 10 minutes after departure.

LOST COMMUNICATIONS: If no transmissions are received within one minute after departure, maintain assigned heading until 7000, then climb to filed altitude direct to DEN VOR/DME, then on assigned route. If filed altitude is above 10000, cross DEN VOR/DME at or above 11000.

BLUE MESA TRANSITION (ROCKI7.HBU): From over DEN VOR/DME on DEN R-243 and HBU R-021 to HBU VOR/DME.

DOVE CREEK TRANSITION (ROCKI7.DVC): From over DEN VOR/DME on DEN R-243 and MTJ R-039 to MTJ VOR/DME, then on MTJ R-218 and DVC R-035 to DVC VORTAC.

KREMMLING TRANSITION (ROCKI7.RLG): From over DEN VOR/DME on DEN R-274 and RLG R-079 to RLG VOR/DME.

MEEKER TRANSITION (ROCKI7.EKR): From over DEN VOR/DME on DEN R-274 and RLG R-079 to RLG VOR/DME, then on RLG R-260 and EKR R-084 to EKR VOR/DME.

MONTROSE TRANSITION (ROCKI7.MTJ): From over DEN VOR/DME on DEN R-243 and MTJ R-039 to MTJ VOR/DME.

RED TABLE TRANSITION (ROCKI7.DBL): From over DEN VOR/DME on DEN R-253 and DBL R-063 to DBL VOR/DME.