

VOR/DME SCC
113.9
Chan **86**

APP CRS
058°

Rwy Ldg
TDZE **67**
Apt Elev **67**

VOR RWY 6

DEADHORSE (SCC) (PASC)

DME required.

For inop ALS, increase S-6 Cats C/D/E to RVR 4500.


MALSR

MISSED APPROACH: Climb to 600 then climbing right turn to 4000 and heading 190° and SCC VOR/DME R-144 to UVALL/SCC 16 DME and hold, continue climb-in-hold to 4000.

AFIS
118.4

ANCHORAGE CENTER
134.4 370.9

DEADHORSE RADIO
123.6 (CTAF) 0

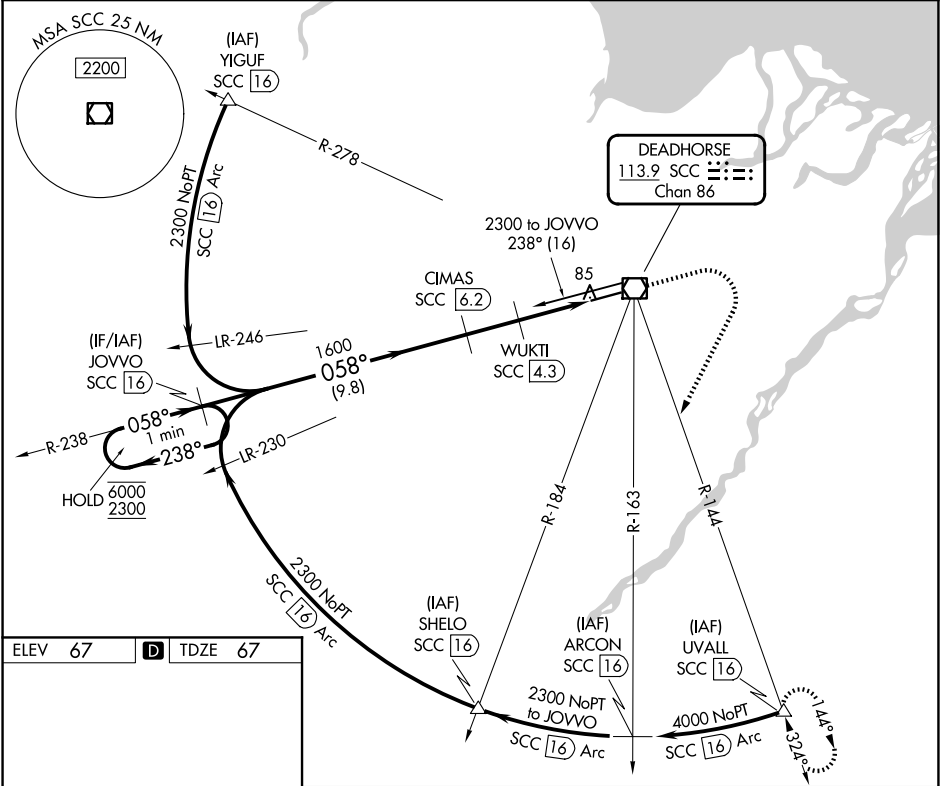

ELEV 67

TDZE 67

JOVVO SCC 16

One Minute Holding Pattern

6000 2300

238° 058°

058°

CIMAS SCC 6.2

WUKTI SCC 4.3

3.02° TCH 50

1600

980

9.8 NM

1.9 NM

1.9 NM

0.8

600 4000

hdg 190°

UVALL SCC 16

R-144

SCC 2.4

SCC 1.6

CATEGORY	A	B	C	D	E
S-6	380/24 313 (400-½)				
CIRCLING	540-1 473 (500-1)	580-1½ 513 (600-1½)	620-2 553 (600-2)		