



LOC I-DNV <b>108.5</b>	APP CRS <b>209°</b>	Rwy Ldg 6006
		TDZE 697
		Apt Elev 697

# ILS or LOC RWY 21

VERMILION RGNL (DNV)

ADF required.	MALSR	MISSED APPROACH: Climb to 1400 then climbing right turn to 2600 direct JULIP LOM and hold, continue climb-in-hold to 2600.
NA Circling NA to Rws 12 and 30.		

AWOS-3 <b>119.275</b>	CHAMPAIGN APP CON * <b>121.35 285.65</b>	CLNC DEL <b>121.7</b>	UNICOM <b>122.7 (CTAF)</b>
--------------------------	---	--------------------------	-------------------------------

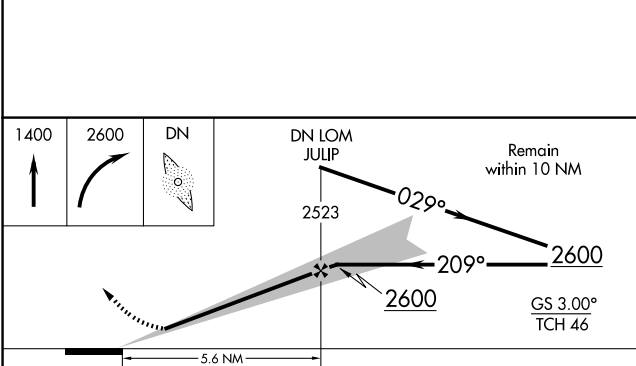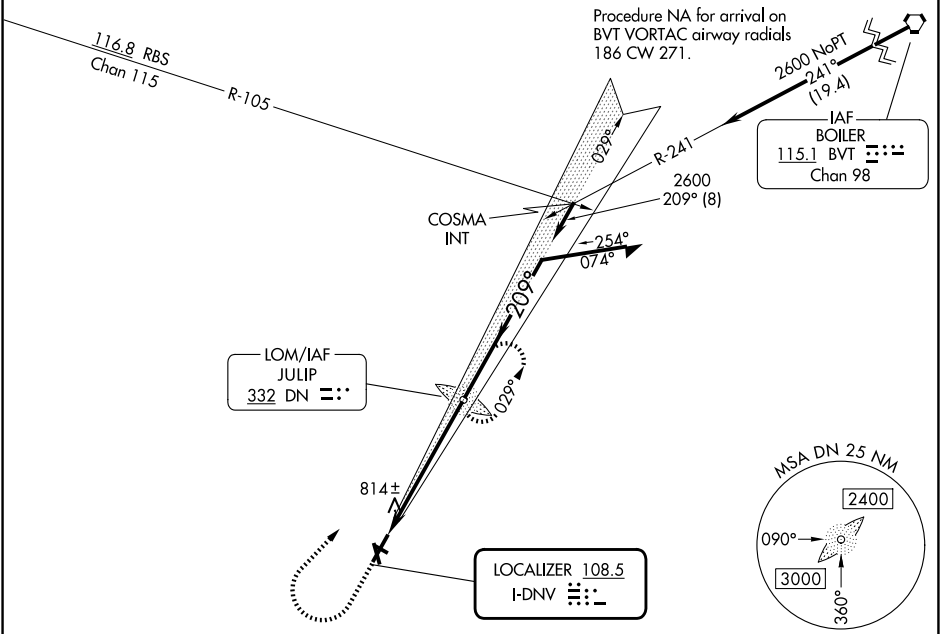

CATEGORY	A	B	C	D
S-ILS 21	897-1/2		200 (200-1/2)	
S-LOC 21	1080-1/2 383 (400-1/2)		1080-5/8 383 (400-5/8)	
CIRCLING	1160-1 463 (500-1)		1240-1 543 (600-1 1/2) 1340-2 643 (700-2)	

