

VOR/DME SCC

113.9

APP CRS

058°

Rwy Ldg TDZE

67

Apt Elev

67

VOR RWY 6

DEADHORSE (SCC) (PASC)


DME required.

For inop ALS, increase S-6 Cats C/D/E to RVR 4500.

MALSR

MISSED APPROACH: Climb to 600 then climbing right turn to 4000 and heading 190° and SCC VOR/DME R-144 to UVALL/SCC 16 DME and hold, continue climb-in-hold to 4000.

AFIS 118.4	ANCHORAGE CENTER 134.4 370.9	DEADHORSE RADIO 123.6 (CTAF) 0
---------------	---------------------------------	-----------------------------------

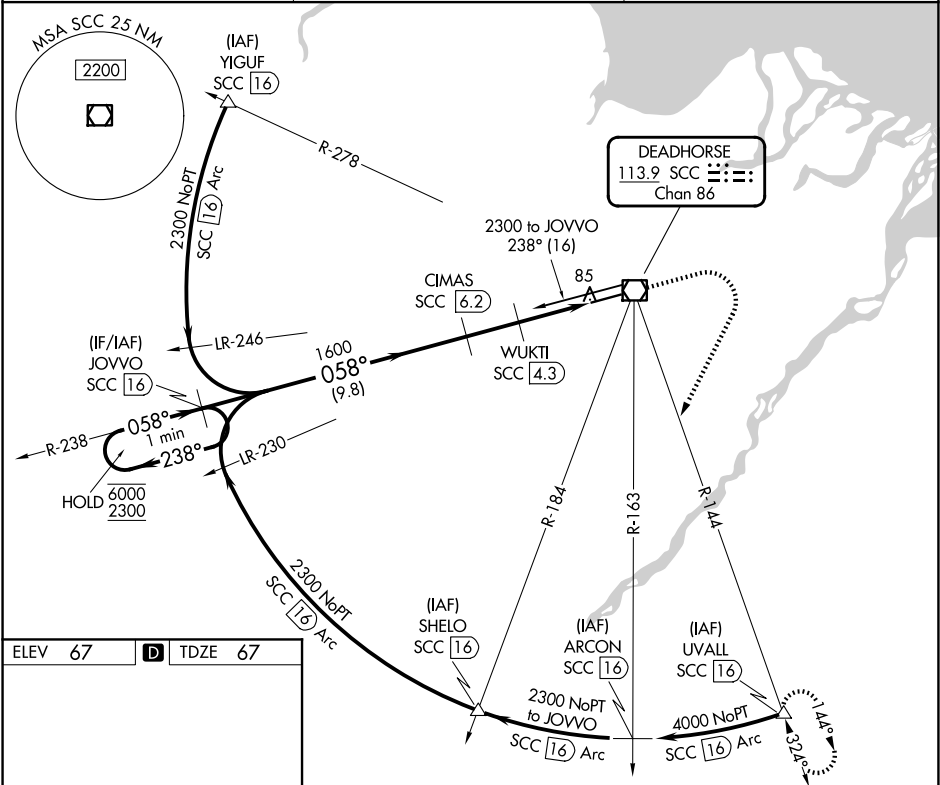

ELEV 67

TDZE 67

One Minute Holding Pattern

JOVVO SCC 16

6000 2300

238° 058°

058°

1600

9.8 NM

1.9 NM

1.9 NM

0.8

WUKTI SCC 4.3

3.02° TCH 50

980

600 4000

hdg 190°

SCC 2.4

SCC 1.6

UVALL SCC 16

R-144

CATEGORY	A	B	C	D	E
S-6	380/24 313 (400-½)				
CIRCLING	540-1 473 (500-1)	580-1½ 513 (600-1½)	620-2 553 (600-2)		