

LOC/DME I-FLO
109.1
Chan **28**

APP CRS
093°

Rwy Ldg **6502**
TDZE **147**
Apt Elev **147**

ILS or LOC RWY 9
FLORENCE RGNL (FLO)

RNP APCH - GPS.
DME required.


MALSRR

MISSED APPROACH: Climb to 2000 direct ESVAC and hold.

⚠

Circling Rwy 1, 19 NA at night. For inop ALS, increase S-LOC 9 Cats C and D visibilities to 2 SM.

ATIS 123.625	FLORENCE APP CON★ 118.6 341.7 (256°-074°) 135.25 316.15 (075°-255°)	FLORENCE TOWER★ 125.1 (CTAF) 0 353.85	GND CON 121.9 353.85	UNICOM 122.95
------------------------	---	--	--------------------------------	-------------------------

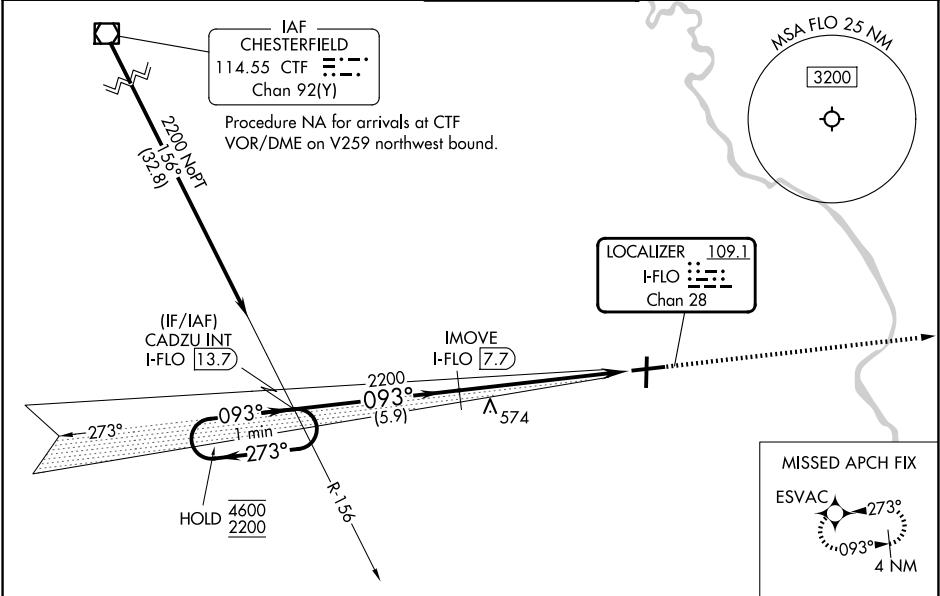

ELEV 147

TDZE 147

One Minute Holding Pattern

2000

ESVAC

4600
2200

←273°

093°→

GS 3.00°
TCH 59

CADZU INT I-FLO **13.7**

IMOVE I-FLO **7.7**

2200

I-FLO **3.5**

I-FLO **1.5**

5.9 NM

4.2 NM

2.1 NM

CATEGORY	A	B	C	D
S-ILS 9	347-1/2 200 (200-1/2)			
S-LOC 9	860-1/2	713 (800-1/2)	860-15/8	713 (800-15/8)
CIRCLING	860-1	713 (800-1)	900-21/4 753 (800-21/4)	900-21/2 753 (800-21/2)

TWR★ 61

6502 X 150

6502 X 150

0.4% UP

0.8% UP

093°

REIL Rws 1, 19 and 27

HIRL Rwy 9-27

MIRL Rwy 1-19

FAF to MAP 6.3 NM

Knots	60	90	120	150	180
Min:Sec	6:18	4:12	3:09	2:31	2:06