


VOR or TACAN RWY 23
FORT WAYNE INTL (FWA)

MISSED APPROACH: Climbing left turn to 3000 on FWA VORTAC R-134 to OSBER/FWA 22 DME and hold.




 TASR

ATIS	FORT WAYNE APP CON	FORT WAYNE TOWER	GND CON
121.25 360.825	127.2 284.6	119.1 269.325	121.9 348.6

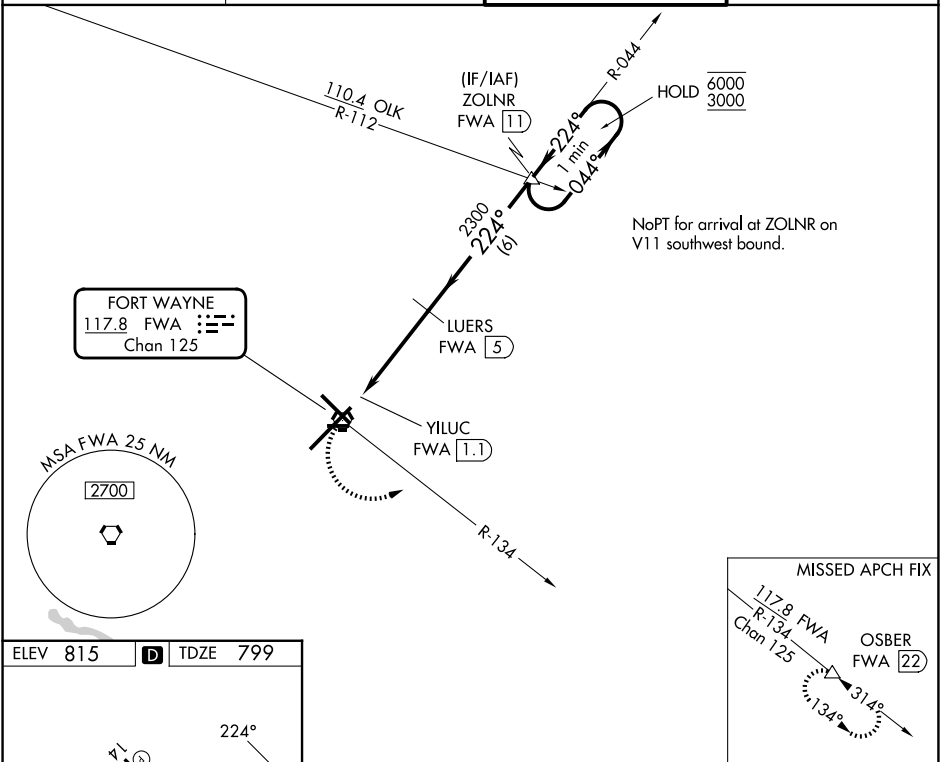

ELEV 815	D	TDZE 799
----------	----------	----------

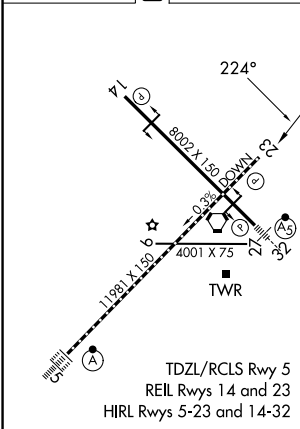

FAF to MAP 3.9 NM					
Knots	60	90	120	150	180
Min:Sec	3:54	2:36	1:57	1:34	1:18

CATEGORY	A	B	C	D	E
S-23	1300/55	501 (500-1)	1300-1 ³ / ₈ 501 (500-1 ³ / ₈)		
CIRCLING	1300-1	485 (500-1)	1360-1 ¹ / ₂ 545 (600-1 ¹ / ₂)	1520-2 ¹ / ₄ 705 (800-2 ¹ / ₄)	1520-2 ¹ / ₂ 705 (800-2 ¹ / ₂)