

LOC/DME I-GWA 109.7 Chan 34	APP CRS 139°	Rwy Ldg TDZE 1260 Apt Elev 1268
---	------------------------	---


ILS or LOC RWY 14
SPRINGFIELD-BRANSON NTL (SGF)

V VDP NA when using HFJ altimeter setting. When local altimeter setting not received, use HFJ altimeter setting and increase S-ILS 14 DA to 1550 feet; increase all MDAs 100 feet and S-LOC 14 visibility Cat C/D/E to RVR 4000 and Circling visibility Cat C/D ½ SM. For inop ALS, increase S-ILS 14 Cat E visibility to RVR 4000, and increase S-LOC 14 Cat C/D/E visibility to 2 SM. *RVR 1800 authorized with use of FD or AP or HUD to DA (NA when using HFJ altimeter setting).


MALSR

MISSED APPROACH: Climb to 1800 then climbing left turn to 3000 direct SGF VORTAC and hold, continue climb in hold to 3000. (TACAN aircraft continue on SGF VORTAC R-024 to PLADD INT and hold northeast, right turn, 204° inbound).

ATIS 135.125	SPRINGFIELD APP CON 124.95 290.5	SPRINGFIELD TOWER 119.9 257.8	GND CON 121.9 251.15
------------------------	--	---	--------------------------------

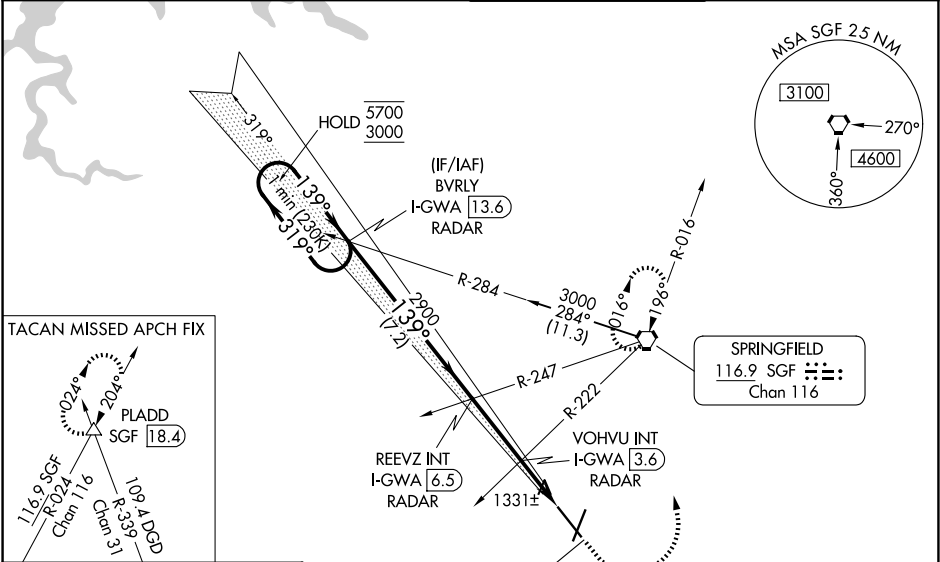

ELEV 1268	D	TDZE 1260
-----------	----------	-----------

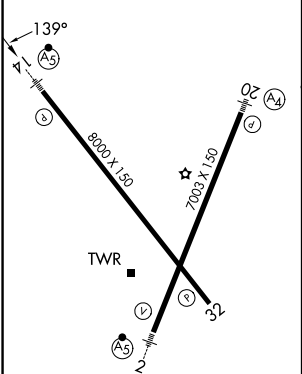

REIL Rwy 32 HIRL Rws 2-20 and 14-32
FAF to MAP 5 NM
Knots 60 90 120 150 180
Min:Sec 5:00 3:20 2:30 2:00 1:40

LOCALIZER 109.7
I-GWA
Chan 34

One Minute Holding Pattern		BVRLY I-GWA 13.6 RADAR	REEVZ INT I-GWA 6.5 RADAR	1800	3000	SGF
5700 3000		319° 139°	139°	2900	2000	2000
GS 3.00° TCH 56		7.2 NM	2.8 NM	1.3 NM	0.9 NM	
CATEGORY	A	B	C	D	E	
S-ILS 14*	1460/24		200 (200-½)			
S-LOC 14	1600/24	340 (400-½)	1600/26		340 (400-½)	
CIRCLING	1760-1 492 (500-1)	1820-1 552 (600-1)	1820-1½ 552 (600-1½)	1920-2 652 (700-2)	2080-3 812 (900-3)	

NC-3, 09 JUL 2026 to 06 AUG 2026

NC-3, 09 JUL 2026 to 06 AUG 2026