

|                                                      |                        |                             |                                       |
|------------------------------------------------------|------------------------|-----------------------------|---------------------------------------|
| VORTAC <b>PIE</b><br><b>116.4</b><br>Chan <b>111</b> | APP CRS<br><b>193°</b> | Rwy Ldg<br>TDZE<br>Apt Elev | <b>N/A</b><br><b>N/A</b><br><b>11</b> |
|------------------------------------------------------|------------------------|-----------------------------|---------------------------------------|



VOR-B

ST PETE-CLEARWATER INTL (PIE)

DME required.

**MISSED APPROACH:** Climb to 700 then climbing right turn to 2600 on heading 030° and PIE VORTAC R-013 to ESETE/PIE 12.7 DME and hold.

|                      |                                      |                                                                |                               |                         |
|----------------------|--------------------------------------|----------------------------------------------------------------|-------------------------------|-------------------------|
| ATIS<br><b>134.5</b> | TAMPA APP CON<br><b>125.3 316.05</b> | ST PETERSBURG-CLEARWATER TOWER★<br><b>118.3 (CTAF) 0 257.8</b> | GND CON<br><b>121.9 348.6</b> | UNICOM<br><b>122.95</b> |
|----------------------|--------------------------------------|----------------------------------------------------------------|-------------------------------|-------------------------|

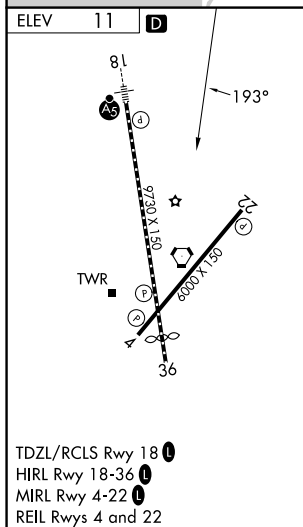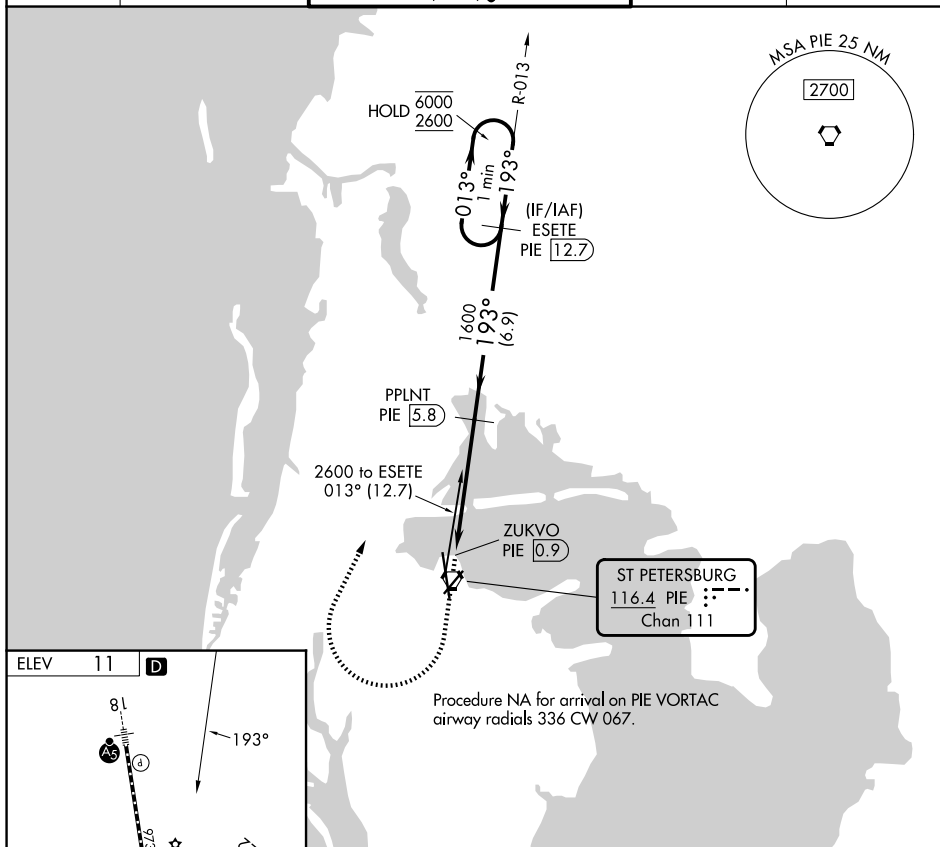

700  
↑  
hdg 030°  
PIE R-013  
ESETE PIE 12.7  
ESETE PIE 12.7  
One Minute Holding Pattern  
ZUKVO PIE 0.9  
PIE VORTAC  
PPLNT PIE 5.8  
1600  
193°  
013° → 6000  
← 193° 2600  
4.9 NM  
6.9 NM  
CATEGORY A B C D  
CIRCLING 520-1 509 (600-1) 600-1½ 620-2  
589 (600-1½) 609 (700-2)