


|                                               |                        |                                         |                          |
|-----------------------------------------------|------------------------|-----------------------------------------|--------------------------|
| VORTAC PXR<br><b>115.6</b><br>Chan <b>103</b> | APP CRS<br><b>003°</b> | Rwy Ldg<br>TDZE<br>Apt Elev <b>1510</b> | <b>N/A</b><br><b>N/A</b> |
|-----------------------------------------------|------------------------|-----------------------------------------|--------------------------|

VOR/DME-A  
SCOTTSDALE (SDL)

**T** When local altimeter setting not received, use  
**A** Phoenix Sky Harbor altimeter setting and increase all  
MDA 100 feet and increase visibility Cat C  $\frac{1}{4}$  SM.

**MISSED APPROACH:** Climbing left turn to 7000 on heading 280° and on PXR VORTAC R-336 to AVENT/PXR 15.9 DME and hold, continue climb-in-hold to 7000.

|                      |                                       |                                            |                         |
|----------------------|---------------------------------------|--------------------------------------------|-------------------------|
| ATIS<br><b>118.6</b> | PHOENIX APP CON<br><b>120.7 239.0</b> | SCOTTSDALE TOWER*<br><b>119.9 (CTAF) 0</b> | GND CON<br><b>121.6</b> |
|----------------------|---------------------------------------|--------------------------------------------|-------------------------|

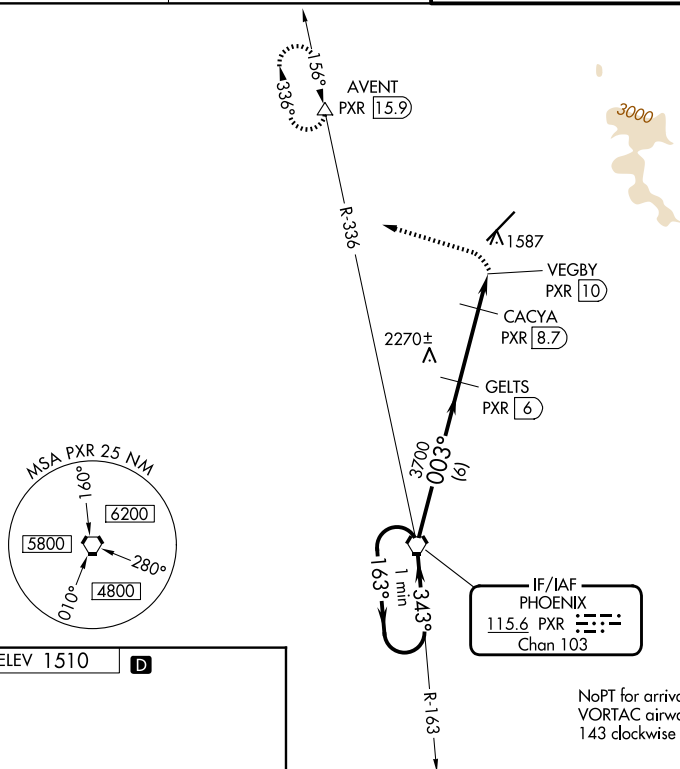

NoPT for arrivals on PXR  
VORTAC airway radials  
143 clockwise 163.

