

LOC/DME I-DEJ	APP CRS	Rwy Ldg	8500
109.5	011°	TDZE	284
Chan 32		Apt Elev	285

ILS or LOC RWY 1

ALBANY INTL (ALB)

⚠



⚠

Circling NA west of Rwy 1-19. DME or RADAR required.
Circling Rwy 10 NA at night.

MALSR

MISSED APPROACH: Climb to 800 then climbing right turn to 5000 and on CAM VOR/DME R-251 to CAM VOR/DME and hold.

D-ATIS	ALBANY APP CON	ALBANY TOWER	GND CON	CLNC DEL
120.45	132.825 307.2	119.5 257.8	121.7 348.6	127.50

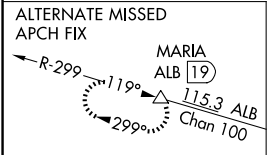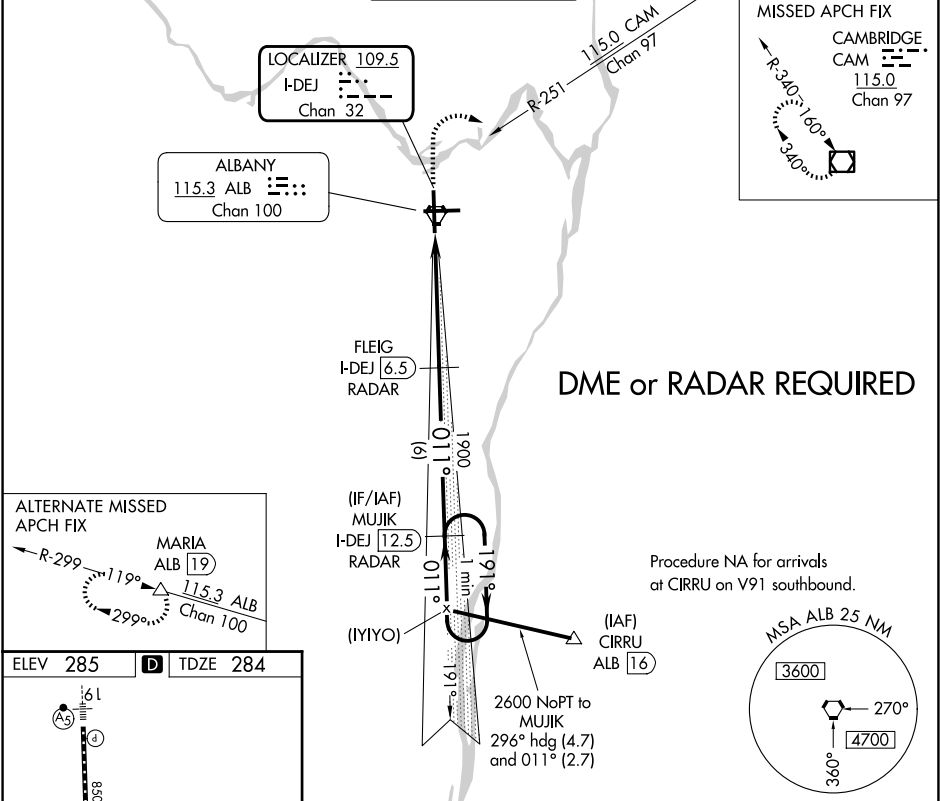

ELEV 285	D	TDZE 284
TDZ/CL Rwy 1		
HIRL Rws 1-19 and 10-28		
REIL Rws 10 and 28		
FAF to MAP 4.9 NM		
Knots	60	90 120 150 180
Min:Sec	4:54	3:16 2:27 1:58 1:38

800	5000	CAM	MUJIK I-DEJ 12.5		One Minute Holding Pattern	
			FLEIG I-DEJ 6.5	RADAR		
* LOC only.						
I-DEJ 1.6						
I-DEJ 2.8						
1900						
1900						
1900						
Use I-DEJ DME when on the localizer course.						
GS 3.00° TCH 56						
1.2		3.7 NM		6 NM		
A		B		C		
S-ILS 1		484/18		200 (200-½)		
S-LOC 1		720/24 436 (500-½)		720/40 436 (500-¾)		
CIRCLING		820-1 535 (600-1)		860-1½ 960-2¼ 575 (600-1½) 675 (700-2¼)		