

VOR/DME or TACAN RWY 17C

VORTAC END 115.4 Chan 101	APCH CRS 182°	Rwy Idg 9217 TDZE 1278 Arpt Elev 1307
---	-------------------------	--

[USAF]

VANCE AFB (KEND)

RNAV or RADAR monitoring required for missed approach.


SALSF

MISSED APPROACH: Climb to 3000 on END VORTAC R-174 to ADOWS/15 DME and hold.

▼ *When ALS inop, increase CAT AB RVR to 55, vis to 1 mile; CAT CDE RVR to 60, vis to 1½ miles.




ATIS ★ 115.4 263.15	APP CON ★ 125.45 343.625 (E) 126.75 346.325 (W)	TOWER ★ 124.05 259.1	GND CON ★ 121.675 289.4
-------------------------------	---	--------------------------------	-----------------------------------

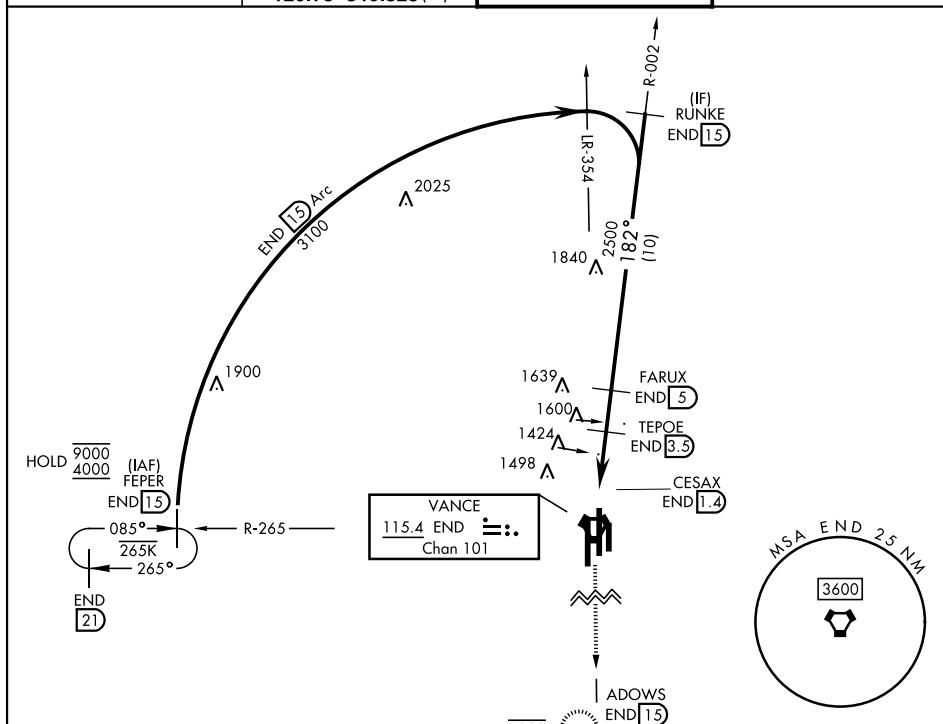

EMERG SAFE ALT 100 NM 4500

	RUNKE END 15	FARUX END 5	TEPOE END 3.5	END 2	CESAX END 1.4	END VORTAC
	3100	2500	2080			
		182°	254°			
			TCH 51			
			2.1 NM	0.8 NM		
CATEGORY	A	B	C	D	E	
S-17C *	1680/40	402 (400-¾)	1680/50	402 (400-1)		
CIRCLING	1760-1	453 (500-1)	1800-1½ 493 (500-1)	1900-2 593 (600-2)	2400-3 1093 (1100-3)	

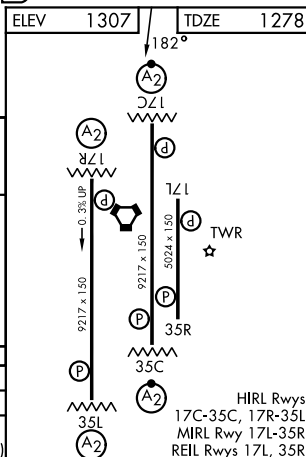

VOR/DME or TACAN RWY 17C