

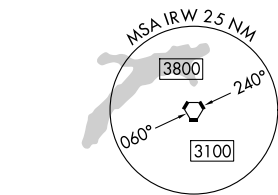


ILS RWY 17R (SA CAT II)
OKC WILL ROGERS INTL (OKC)

MISSED APPROACH: Climb to 2000 then climbing right turn to 3000 on heading 311° and on PWA VOR/DME R-216 to JESKE INT/PWA 14.5 DME and hold.

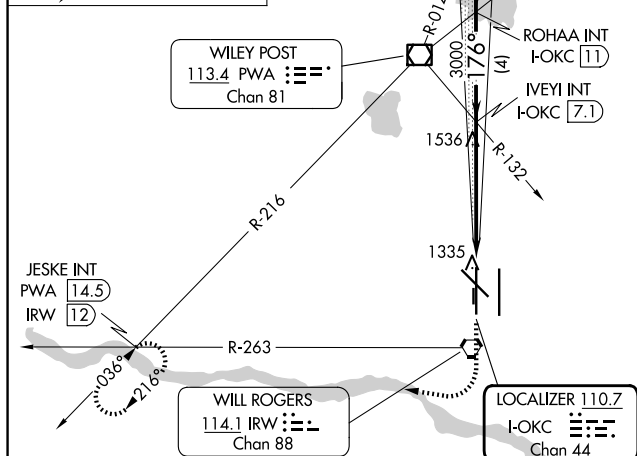

ELEV 1296	D	TDZE 1282
-----------	----------	-----------

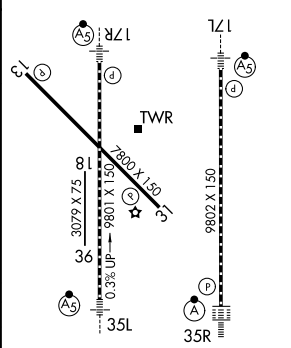

SA CATEGORY II ILS - SPECIAL AIRCREW
& AIRCRAFT CERTIFICATION REQUIRED

TDZL/RCLS Rwy 35R
MIRL Rwy 13-31
REIL Rwy 13 and 31
HIRL Rwy 17L-35R and 17R-35L