

LOC/DME I-OMA
110.3
Chan **40**

APP CRS
142°

Rwy Ldg **9502**
TDZE **985**
Apt Elev **985**

ILS RWY 14R (SA CAT I)

EPPLEY AIRFIELD (OMA)


DME required for procedure entry.

Requires specific OPSPEC, MSPEC or LOA approval and use of HUD to DA.

ALSF-2

MISSED APPROACH: Climb to 1900 then climbing left turn to 3000 direct OVR VORTAC and hold.

D-ATIS 120.4	OMAHA APP CON 135.875 354.05	OMAHA TOWER 132.1 256.9	GND CON 121.9
------------------------	--	-----------------------------------	-------------------------

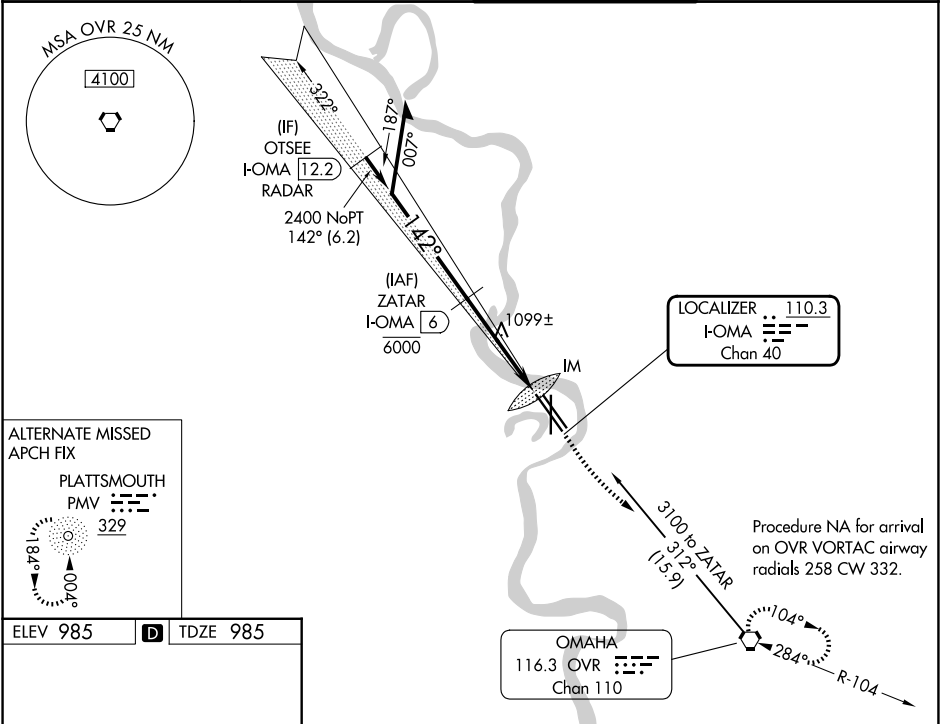

ELEV 985 D TDZE 985

HIRL all Rwys
TDZ/CL Rwys 14R and 32R

Remain within 10 NM

ZATAR I-OMA 6 6000

1900 3000 OVR

2900 322° 2400 142° 2400

GS 3.00° TCH 57

IM

4.3 NM 1081'

CATEGORY	A	B	C	D
S-ILS 14R	RA 154/14 150 DA 1135			

SA CATEGORY I ILS - SPECIAL AIRCREW & AIRCRAFT CERTIFICATION REQUIRED