

LOC I-PQI <u>108.7</u>	APP CRS 003°	Rwy Ldg 7441 TDZE 479 Apt Elev 534
----------------------------------	------------------------	---

ILS or LOC RWY 1
PRESQUE ISLE INTL (PQI)


DME required.



MISSED APPROACH:
Climb to 1100 then
climbing left turn to
3000 direct PQI
VOR/DME and hold,
continue climb-in-hold
to 3000.

AWOS-3PT 118.025	BOSTON CENTER 124.75 239.05	CLNC DEL 121.6	UNICOM 122.8 (CTAF)	122.6
----------------------------	---------------------------------------	--------------------------	-------------------------------	--

Procedure NA for arrivals
at PQI VOR/DME
on T295 northbound.

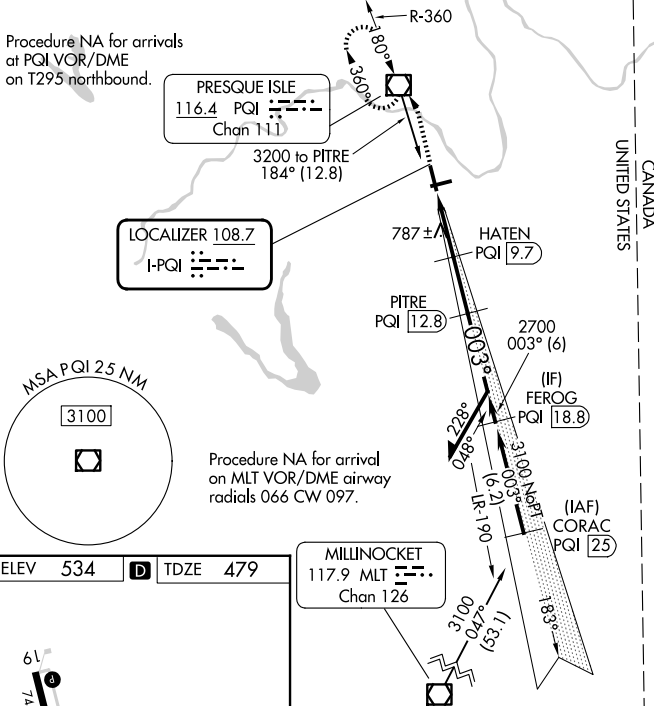

CANADA
UNITED STATES

MSA PQI 23 NM

3100

Procedure NA for arrival
on MLT VOR/DME airway
radials 066 CW 097.

MILLINOCKET
17.9 MLT 
Chan 126

ELEV	534	D	TDZE	479
------	-----	----------	------	-----

