
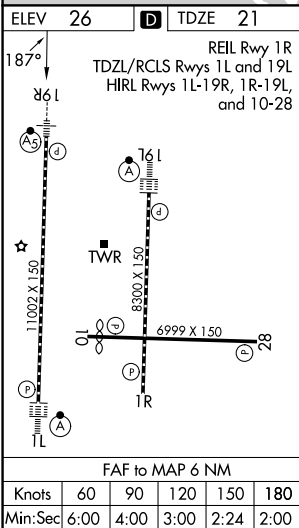


LOC/DME I-JRT 108.5 Chan 22	APP CRS 187°	Rwy Ldg 11002 TDZE 21 Apt Elev 26
---	------------------------	--

ILS or LOC RWY 19R
TAMPA INTL (TPA)

DME or RADAR required. Simultaneous approach authorized. For inop ALS, increase S-ILS 19R Cat E visibility to RVR 4000 and S-LOC 19R Cats C/D/E visibility to RVR 5500. *RVR 1800 authorized with use of FD or AP or HUD to DA.		MALS R 	MISSED APPROACH: Climb to 500 then climbing right turn to 2000 direct PIE VORTAC and hold, continue climb-in-hold 2000. (TACAN aircraft climb to 500 then climbing right turn to 2000 direct PIE VORTAC then on PIE VORTAC R-276 to LAFAL INT/PIE 8 DME and hold W, RT, 096° inbound.)
D-ATIS 126.45	TAMPA APP CON 118.5 307.175	TAMPA TOWER 119.5 269.4	GND CON 121.7 269.4

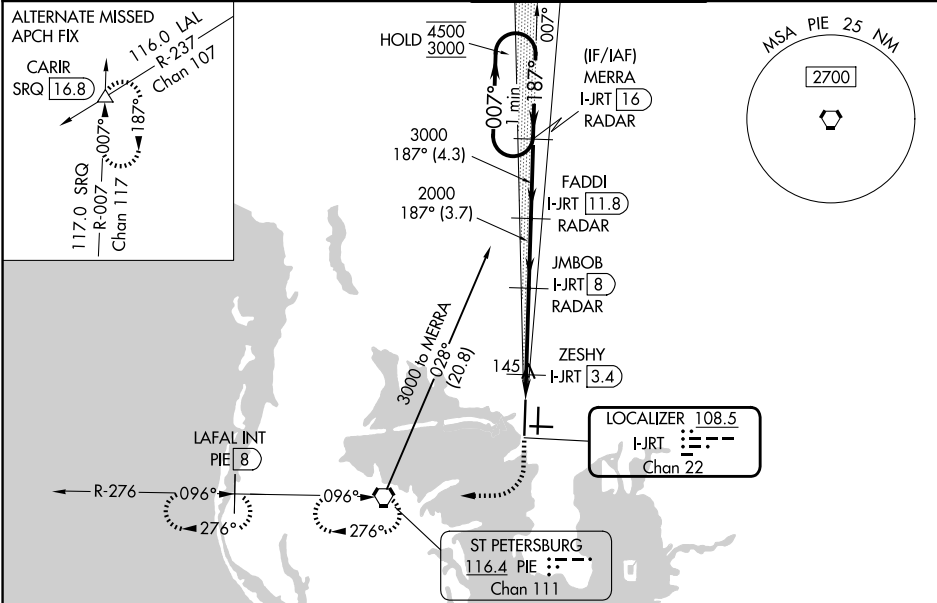

500 ↑	2000 ↗	PIE 	VGSI and ILS glidepath not coincident (VGSI Angle 3.00/TCH 71).				One Minute Holding Pattern	
			JMBOB I-JRT 8 RADAR	FADDI I-JRT 11.8 RADAR	MERRA I-JRT 16 RADAR			