


TACAN RWY 13

TACAN CV5 Chan 53	APCH CRS 120°	Rwy Idg 8194 TDZE 4294 Arprt Elev 4295	[USAF]	CANNON AFB (KCVS)	
Missed approach requires use of RNAV or RADAR monitoring.			MALSR 	MISSED APPROACH: Climb to 6000 out CV5 TACAN R-130 to 5.6 DME (HOME) then turn right climbing to 7000 intercept CV5 R-193 to 12 DME (CLINK) and hold.	
ATIS 119.1 269.9		APP CON 118.425 352.1		TOWER 120.4 270.25	GND CON 121.9 275.8

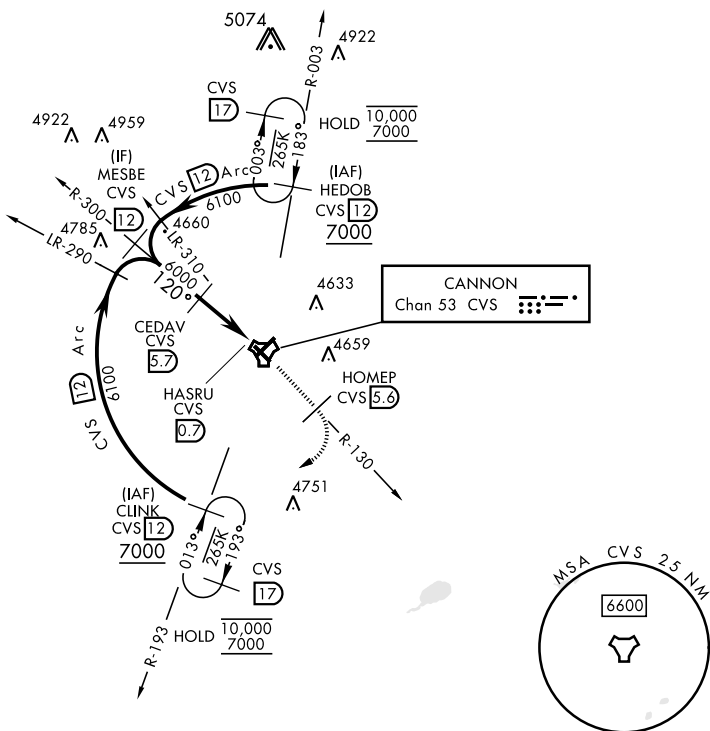

EMERG SAFE ALT 100 NM 9000

EMERG SAFE ALT 100 NM 9000

MESBE CVS 12

6100

120°

6000

5 NM

0.1

3.13° TCH 37

6000

7000

HOMEP CVS 5.6

CLINK CVS 12

CEDAV CVS 5.7

HASRU CVS 0.7

CVR TACAN

506

CATEGORY	A	B	C	D	E
S-13 *	4800-¾	506 (600-¾)	4800-1	506 (600-1)	
CIRCLING	4840-1	545 (600-1)	4860-1½ 565 (600-1½)	5000-2½ 705 (800-2½)	5020-2½ 725 (800-2½)

HIRL all rwys