


LOC I-SOU 110.1	APP CRS 013°	Rwy Ldg TDZE Apt Elev 9072 1180 1205
---------------------------	------------------------	--

ILS or LOC RWY 1
MARQUETTE/SAWYER RGNL (SAW)


DME required for LOC only.	MALSR	MISSED APPROACH: Climb to 1700 then climbing right turn to 3000 on heading 138° and on SAW VOR/DME R-095 to YEXJO INT and hold, continue climb-in-hold to 3000.
NA Autopilot coupled approach NA below 1360 MSL.	AS	

AWOS-3PT 118.375	MINNEAPOLIS CENTER 119.1 290.2	SAWYER TOWER ★ 119.975 (CTAF) 0	GND CON 121.65	UNICOM 122.7
----------------------------	--	---	--------------------------	------------------------

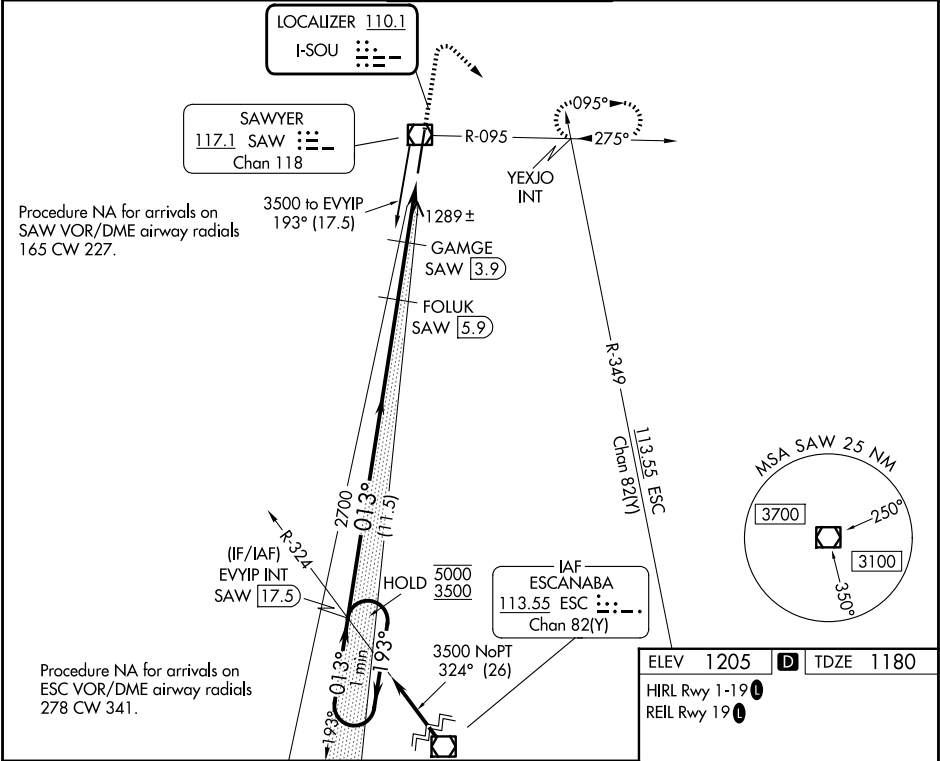

One Minute Holding Pattern		EVYIP INT SAW 17.5	FOLUK SAW 5.9	1700	3000	SAW R-095	YEXJO INT
5000 ← 193°		3500 ← 013°	2700	GAMGE SAW 3.9	2040	SAW 2.4	SAW 1.3
GS 3.00°		TCH 50	2700	2040			
		11.5 NM	2.1 NM	1.5 NM	1.1 NM		
CATEGORY	A	B	C	D			
S-ILS 1	1380-½		200 (200-½)				
S-LOC 1	1580-½		400 (400-½)		1580-⅝	400 (400-⅝)	
CIRCLING	1680-1		475 (500-1)		1820-1¾	1820-2	
					615 (700-¾)	615 (700-2)	

ELEV 1205	D	TDZE 1180
HIRL Rwy 1-19		
REIL Rwy 19		

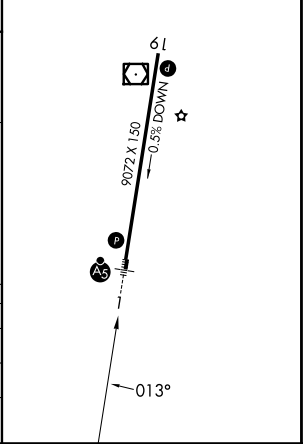

EC-1, 06 AUG 2026 to 03 SEP 2026

EC-1, 06 AUG 2026 to 03 SEP 2026