

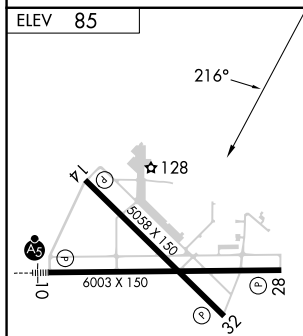
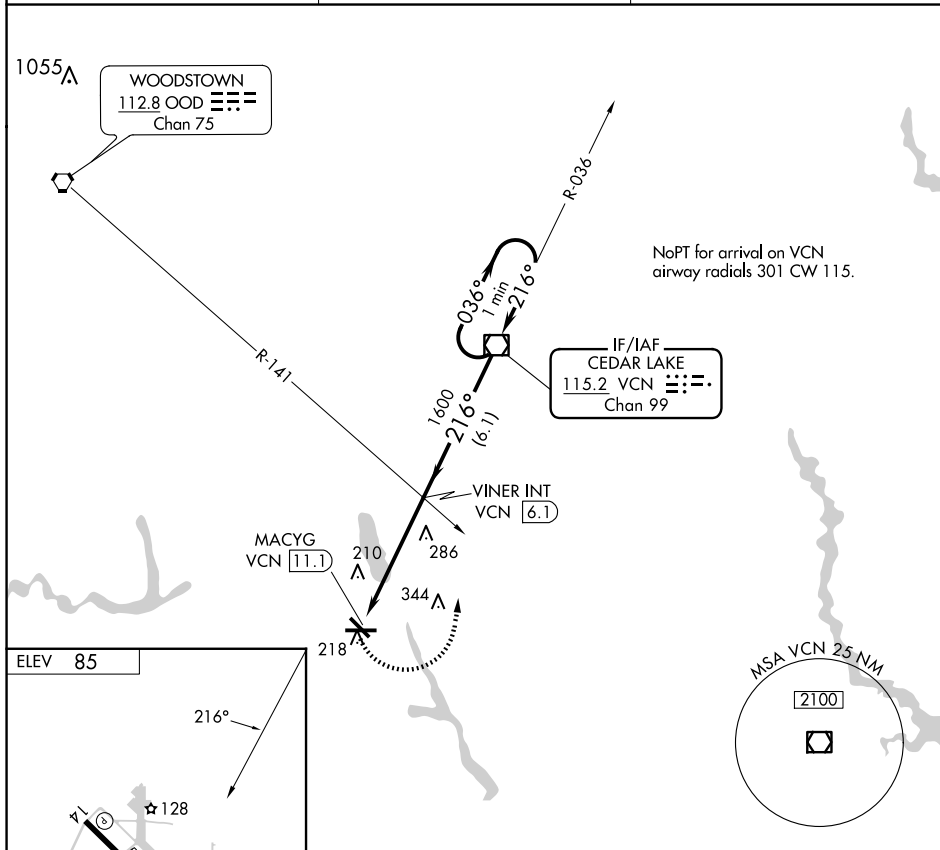
VOR/DME VCN 115.2 Chan 99	APP CRS 216°	Rwy Idg TDZE Apt Elev 85	N/A N/A
---	------------------------	--	--------------------------

VOR-A
MILLVILLE MUNI (MIV)

T When local altimeter setting not received, use Atlantic City altimeter setting
A and increase all MDAs 60 feet and visibility Circling Cat C ¼ SM.

MISSED APPROACH: Climbing left turn to 2000 direct VCN VOR/DME and hold.

ASOS 119.6	ATLANTIC CITY APP CON 124.6 327.125	UNICOM 123.0 (CTAF) 0
----------------------	---	---------------------------------

MIRL Rwy 10-28 and 14-32 **L**

FAF to MAP 5.1 NM					
Knots	60	90	120	150	180
Min:Sec	5:06	3:24	2:33	2:02	1:42

2000	VCN		VCN VOR/DME		One Minute Holding Pattern
CATEGORY	A		B	C	D
CIRCLING	600-1 515 (600-1)		660-1½ 575 (600-1½)	660-2 575 (600-2)	