

LOC I-TTN	APP CRS	Rwy Idg	6006
111.3	058°	TDZE	186
		Apt Elev	213


ILS or LOC RWY 6
TRENTON MERCER (TTN)

V When Circling to Rwy 34 at night, operational VGSI required, remain on or above VGSI glidepath until threshold.
A For inop ALS, increase S-LOC 6 Cat C/D visibility to 1½ SM.

MALSR

MISSED APPROACH: Climb to 1500 then climbing left turn to 2700 direct ARD VOR/DME and hold, continue climb-in-hold to 2700.

ATIS 126.775	PHILADELPHIA APP CON 123.8 291.7	TRENTON TOWER ★ 120.7 (CTAF) 0 257.8	GND CON 121.9 257.8	UNICOM 122.95
-----------------	-------------------------------------	---	------------------------	------------------

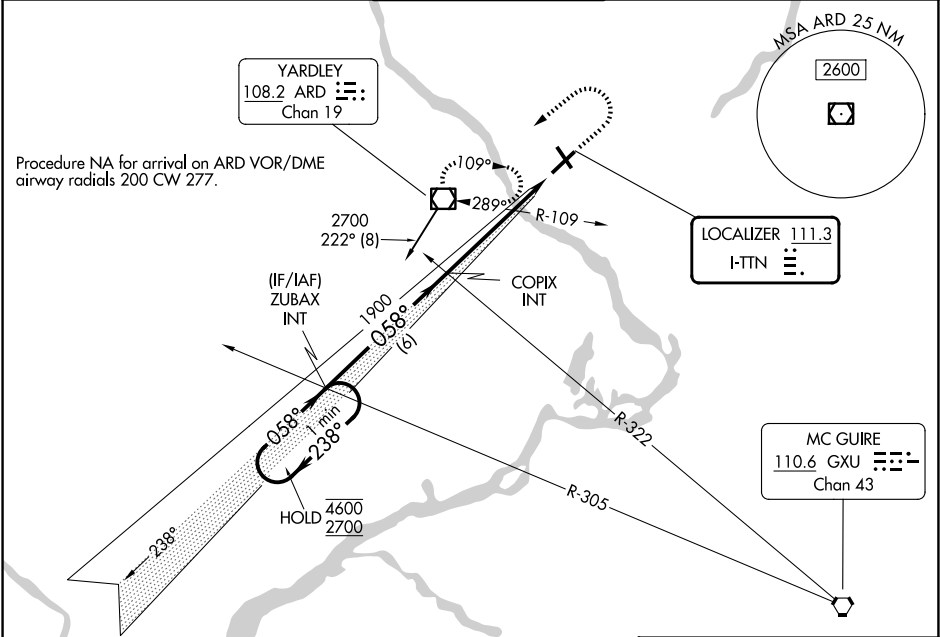

One Minute Holding Pattern

ZUBAX INT

COPIX INT

1500 2700 ARD

CATEGORY	A	B	C	D
S-ILS 6	390-½ 204 (200-½)			
S-LOC 6	660-½ 474 (500-½)		660- 1 474 (500-1)	
CIRCLING	680-1 467 (500-1)		760-1½ 980-2½ 547 (600-1½) 767 (800-2½)	

ELEV 213 TDZE 186

Knots	60	90	120	150	180
Min:Sec	5:18	3:32	2:39	2:07	1:46