



CHARLOTTE DEP CON 120.05 307.8 ASOS 120.775	RNAV 1 - DME/DME/IRU or GPS.	TOP ALTITUDE: 3000
	RADAR required.	

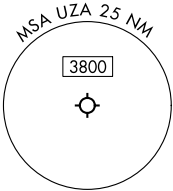

TAKEOFF MINIMUMS
Rwys 2, 20: Standard.

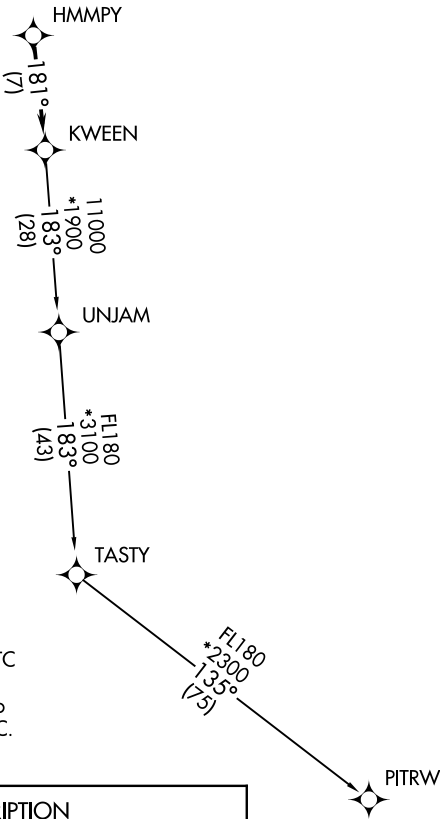

- NOTE: Turbojet only.
NOTE: Transponder code will be issued via PDC or CLT CLNC DEL.
NOTE: If unable to accept climb rates, advise ATC on initial contact.
NOTE: Upon reaching 10000 MSL, accelerate to and maintain 280K, if unable advise ATC.

DEPARTURE ROUTE DESCRIPTION

Climb on heading assigned by ATC for RADAR vectors to HMMPY, then on track 181° to KWEEN, then on assigned transition, maintain 3000, expect filed altitude 10 minutes after departure.

PITRW TRANSITION (KWEEN7.PITRW)
UNJAM TRANSITION (KWEEN7.UNJAM)

NOTE: Chart not to scale.