



LOC/DME I-BWWM 111.95 Chan 56(Y)	APP CRS 177°	Rwy Ldg TDZE 1182 Apt Elev 1182
--	------------------------	---

ILS or LOC RWY 18

UNIVERSITY OF OKLAHOMA WESTHEIMER (OUN)

DME required.	MALSR	MISSED APPROACH: Climbing right turn to 3100 on heading 185° and IRW VORTAC R-155 to WETIX/IRW VORTAC 22.4 DME and hold.
▼ Circling NA southeast of Rwy 3-21. VDP NA when using OKC altimeter setting. ▲ When local altimeter setting not received, use OKC altimeter setting: increase S-ILS 18 DA to 1423 feet; increase all MDAs 60 feet, S-LOC 18 visibility Cats C and D ½ SM, and Circling visibility Cats C and D ¼ SM; increase JIXPU fix minimums S-LOC 18 visibility Cats C and D ½ SM, and Circling visibility Cats C and D ¼ SM.		

AWOS-3PT 119.55	OKE CITY APP CON 120.45 288.325	WESTHEIMER TOWER★ 118.0 (CTAF) 0	GND CON 121.6	UNICOM 122.95
---------------------------	---	--	-------------------------	-------------------------

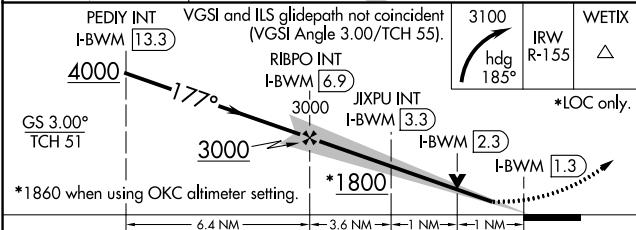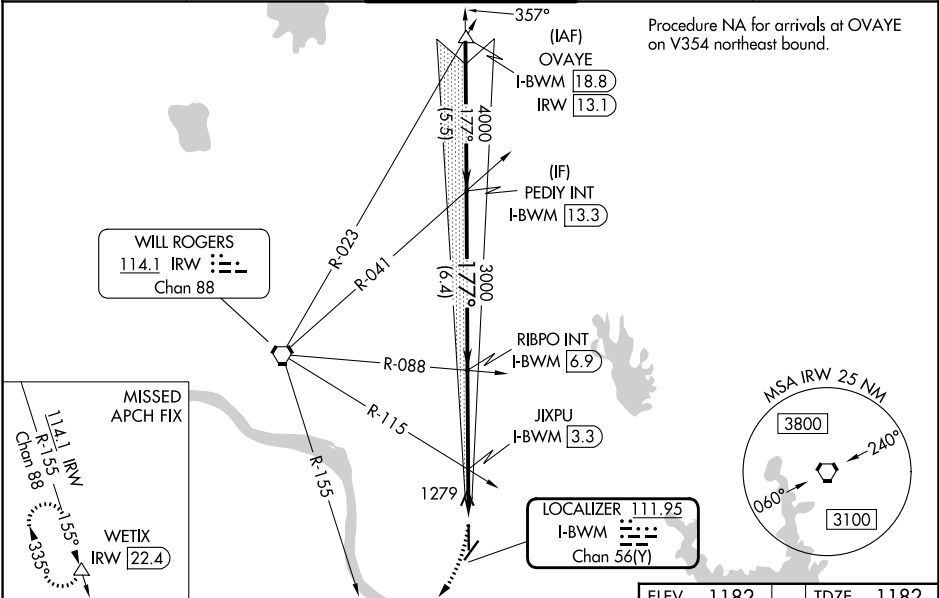

CATEGORY	A	B	C	D
S-ILS 18	1382-½		200 (200-½)	
S-LOC 18	1800-½	618 (700-½)	1800-1¾	618 (700-1¾)
CIRCLING	1800-1	618 (700-1)	1940-2¼ 758 (800-2¼)	1940-2½ 758 (800-2½)
JIXPU FIX MINIMUMS (DUAL VOR RECEIVERS OR DME REQUIRED)				
S-LOC 18	1540-½	358 (400-½)	1540-5/8	358 (400-5/8)
CIRCLING	1660-1	478 (500-1)	1940-2¼ 758 (800-2¼)	1940-2½ 758 (800-2½)

