


JOE POOL EIGHT DEPARTURE

LONE STAR DEP CON
125.8 257.95
CTAF
123.0


RADAR and DME required.

TOP ALTITUDE:
ASSIGNED BY ATC

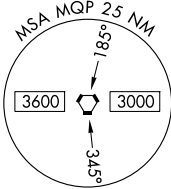

MILLSAP
117.7 MGP
Chan 124

MAVERICK
113.1 TTT
Chan 78

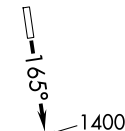

1400

NELYN

JASPA

ARDIA

DARTZ

BRDEN

ELLVR

WINDU

TORN

BILEE

LEONA
110.8 LOA
Chan 45

WACO
115.3 ACT
Chan 100

HOARY

CENTEX
112.8 CWK
Chan 75

SAN ANTONIO
116.8 SAT
Chan 115

COLLEGE STATION
113.3 CLL
Chan 80

TAKEOFF MINIMUMS

Rwy 35: Standard.

Rwy 17: 300-1 $\frac{1}{8}$ or standard with minimum
climb of 512'/NM to 1300.

(CONTINUED ON FOLLOWING PAGE)

NOTE: Chart not to scale.

JOE POOL EIGHT DEPARTURE



DEPARTURE ROUTE DESCRIPTION

TAKEOFF RUNWAY 17: Climb on heading 165° to 1400 before turning right.

Climb on assigned heading for RADAR vectors to appropriate route. Maintain ATC assigned altitude.

COLLEGE STATION TRANSITION (JPOOL8.CLL): From over TTT VOR/DME on TTT R-166 to ELLVR, then on CLL R-334 to CLL VORTAC.

ELLVR TRANSITION (JPOOL8.ELLVR): From over TTT VOR/DME on TTT R-166 to ELLVR.

HOARY TRANSITION (JPOOL8.HOARY): From over TTT VOR/DME on TTT R-186 to NELYN, then on ACT R-357 to ACT VORTAC, then on ACT R-193 to HOARY.

NAVASOTA TRANSITION (JPOOL8.TNV): From over TTT VOR/DME on TTT R-156 to TORNN, then on TNV R-334 to TNV VOR/DME.

SAN ANTONIO TRANSITION (JPOOL8.SAT): From over TTT VOR/DME on TTT R-186 to NELYN, then on ACT R-357 to ACT VORTAC, then on ACT R-193 to HOARY, then on SAT R-024 to SAT VORTAC.

TORNN TRANSITION (JPOOL8.TORNN): From over TTT VOR/DME on TTT R-156 to TORNN.

WACO TRANSITION (JPOOL8.ACT): From over TTT VOR/DME on TTT R-186 to NELYN, then on ACT R-357 to ACT VORTAC.

WINDU TRANSITION (JPOOL8.WINDU): From over TTT VOR/DME on TTT R-176 to WINDU.

- NOTE: COLLEGE STATION Transition: For piston and turboprop aircraft destined to HOU, EFD, GLS, or LBX. Also for all other aircraft types destined to all other Houston terminal area airports except IAH, CXO, DWH, T78 or 6R3.
- NOTE: ELLVR Transition: For turbojet aircraft destined to HOU, EFD, GLS, or LBX.
- NOTE: SAN ANTONIO Transition: For aircraft overflying Centex and San Antonio.
- NOTE: TORNN Transition: Only for aircraft destined IAH, CXO, DWH, T78 or 6R3.
- NOTE: WACO Transition: For aircraft inbound to Waco or Gray terminal area airports.
- NOTE: WINDU Transition: For aircraft inbound to Austin or San Antonio terminal area.