


TOP ALTITUDE:
10000

RADAR and DME required.

KANSAS CITY DEP CON
118.9 251.075

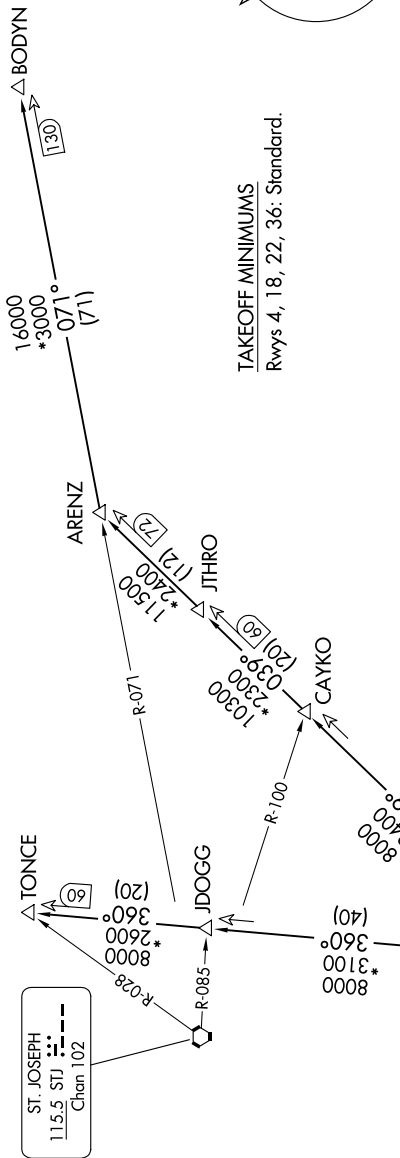

DEPARTURE ROUTE DESCRIPTION

TAKEOFF ALL RUNWAYS: Climb on assigned heading for RADAR vectors to appropriate route. Maintain 10000, expect filed altitude 10 minutes after departure.

ARENZ TRANSITION (ROYAL2.ARENZ): From over MCI VORTAC on MCI R-039 to ARENZ.

BODYN TRANSITION (ROYAL2.BODYN): From over MCI VORTAC on MCI R-039 to ARENZ, then on STJ R-071 to BODYN.

TONCE TRANSITION [ROYAL2.TONCE]: From over MCI VORTAC on MCI R-360 to TONCE.

NOTE: Chart not to scale.