

HI-VOR or TACAN RWY 31


RICK HUSBAND AMARILLO INTL (KAMA)

DME required



T When local altimeter setting not received, use Borger altimeter setting.

MISSED APPROACH: Climbing left turn to 5300 on PNH VORTAC R-176 to JLPY/PNH 11 DME and hold.

ATIS 118.85 350.3	AMARILLO APP CON 119.5 307.0	AMARILLO TOWER ★ 118.3 (CTAF) 0 257.9	GND CON 121.9 348.6	CLNC DEL 121.65 239.275	ASR
----------------------	---------------------------------	--	------------------------	----------------------------	-----

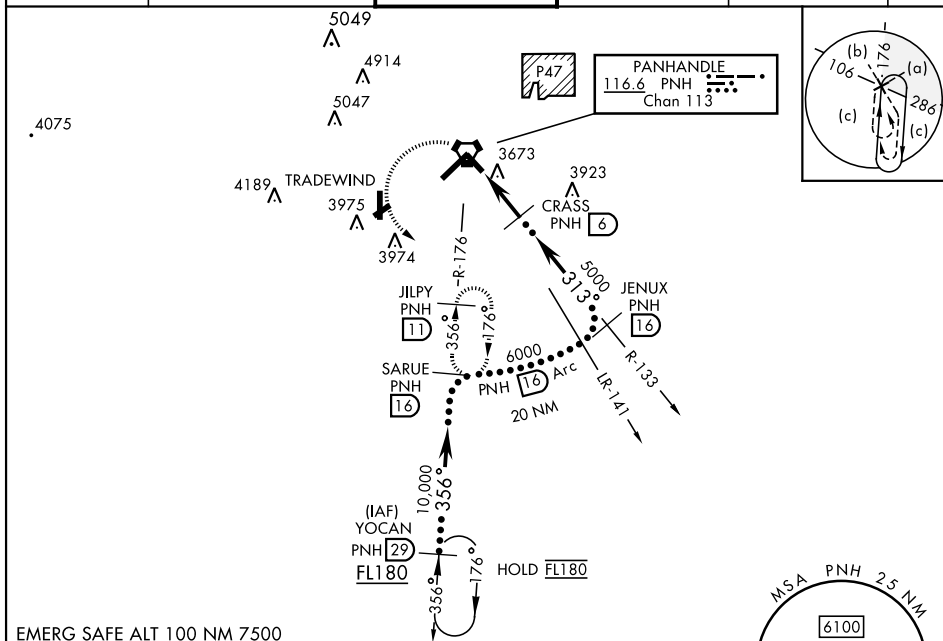

EMERG SAFE ALT 100 NM 7500

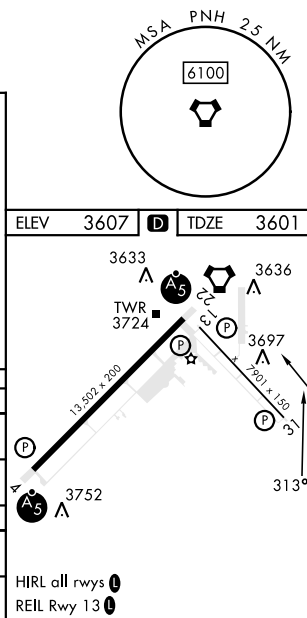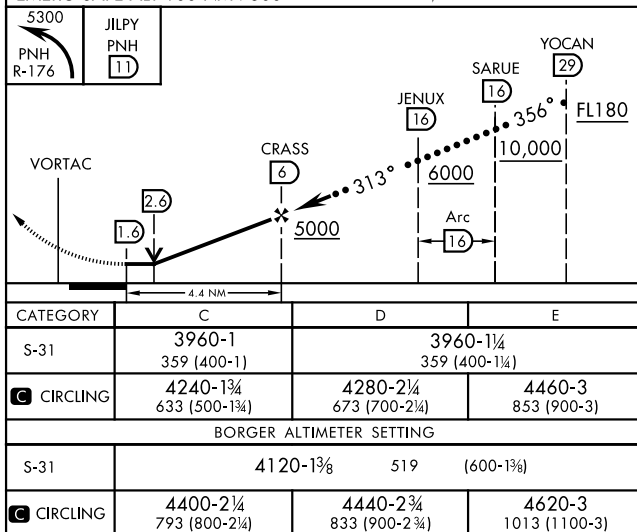

HI-VOR or TACAN RWY 31