
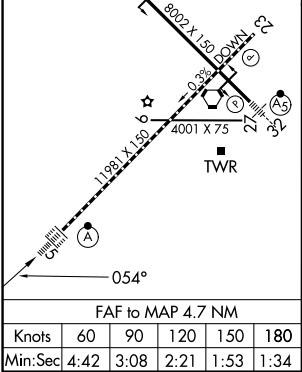




VORTAC FWA	APP CRS	Rwy Ldg	11981
117.8	054°	TDZE	815
Chan 125		Apt Elev	815

VOR or TACAN RWY 5
FORT WAYNE INTL (FWA)

DME required.	ALSIF-2	MISSED APPROACH: Climbing right turn to 3000 on FWA R-134 to OSBER/FWA 22 DME and hold.
For inop ALS, increase S-5 Cats C/D/E visibility to 1½ SM.		

ATIS 121.25 360.825	FORT WAYNE APP CON 127.2 284.6	FORT WAYNE TOWER 119.1 269.325	GND CON 121.9 348.6
------------------------	-----------------------------------	-----------------------------------	------------------------

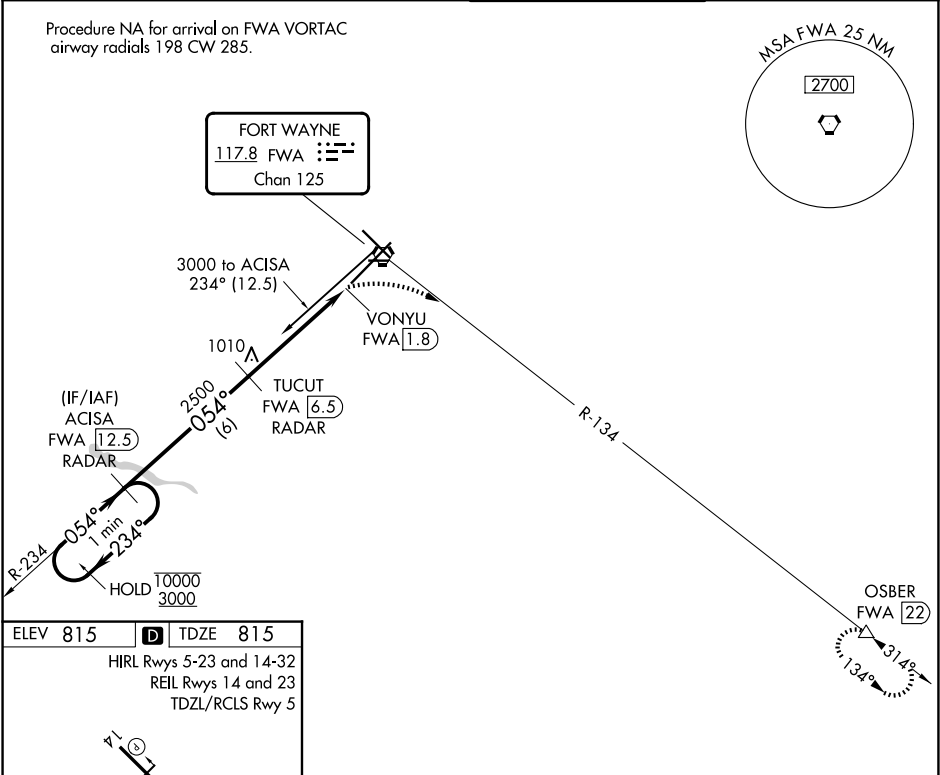

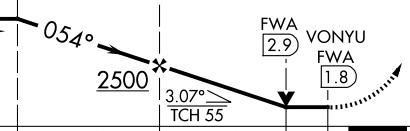One Minute Holding Pattern			ACISA FWA 12.5 RADAR	TUCUT FWA 6.5 RADAR	3000 	FWA R-134	OSBER 
							
CATEGORY	A	B	C	D	E		
S-5	1320/24	505 (600- ½)	1320/55 505 (600-1)				
CIRCLING	1320-1	505 (600-1)	1360-1½ 545 (600-1½)	1520-2¼ 705 (800-2¼)	1520-2½ 705 (800-2½)		