


VORTAC SAC	APP CRS	Rwy Ldg	5503
115.2	016°	TDZE	21
Chan 99		Apt Elev	24

VOR RWY 2

SACRAMENTO EXEC (SAC)

▼ ▲ When local altimeter setting not received, use Sacramento Intl altimeter setting and increase all MDAs 40 feet and Circling Cat D visibility ¼ SM.		MALSR	MISSED APPROACH: Climbing left turn to 1600 direct SAC VORTAC and hold.	
ATIS 118.075	NORCAL APP CON 125.25 257.9	EXEC TOWER ★ 119.5 (CTAF) 0 278.8	GND CON 125.0	UNICOM 122.95

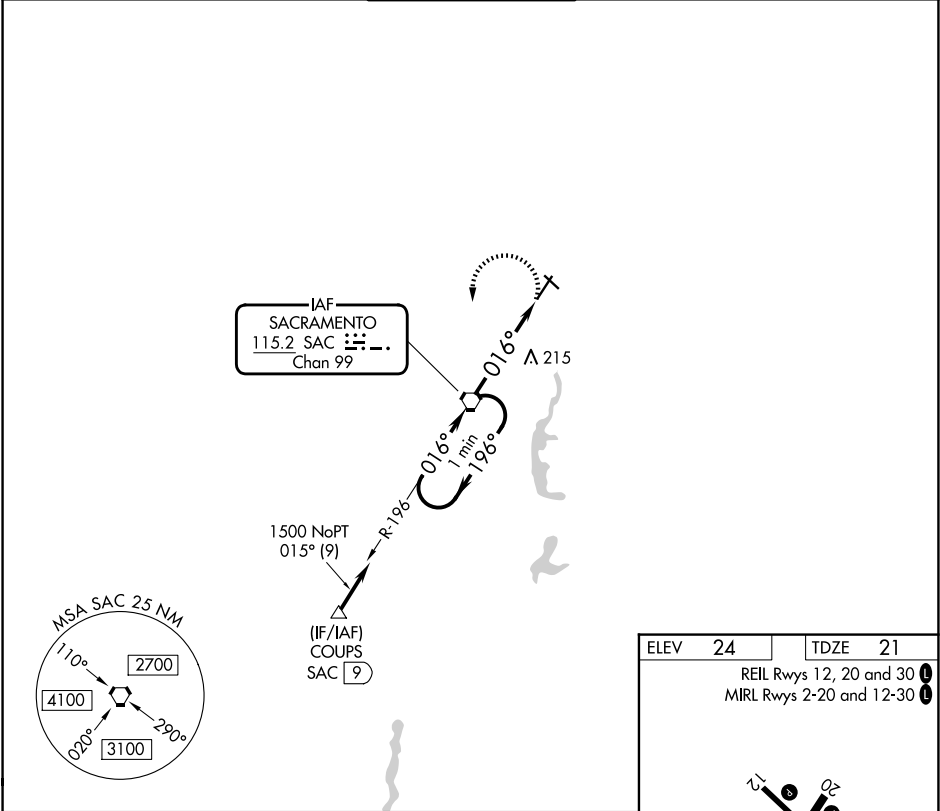

One Minute Holding Pattern		SAC VORTAC		1600	SAC
1500		196°		016°	SAC 4.4
				4.4 NM	
CATEGORY	A	B	C	D	
S-2	520-½	499 (500-½)	520-1	499 (500-1)	
CIRCLING	520-1	496 (500-1)	560-1½ 536 (600-1½)	800-2½ 776 (800-2½)	

ELEV	24	TDZE	21
REIL Rwy's 12, 20 and 30			
MIRL Rwy's 2-20 and 12-30			
TWR			
5503 X 180			
3832 X 100			
016°			
FAF to MAP 4.4 NM			
Knots	60	90	120 150 180
Min:Sec	4:24	2:56	2:12 1:46 1:28