


LOC/DME I-ADJ	APP CRS	Rwy Ldg	7000
109.35	120°	TDZE	1225
Chan 30(Y)		Apt Elev	1249

ILS Y RWY 12

PANGBORN MEML (EAT)

DME required. MALSR MISSED APPROACH: Climb to 2700 then climb to 4000 direct EAT VOR/DME and on EAT VOR/DME R-117 to QUINT INT/EAT 16.6 DME and hold.

ASOS 119.925	SEATTLE CENTER 126.1	UNICOM 123.0 (CTAF) 0
------------------------	--------------------------------	---------------------------------

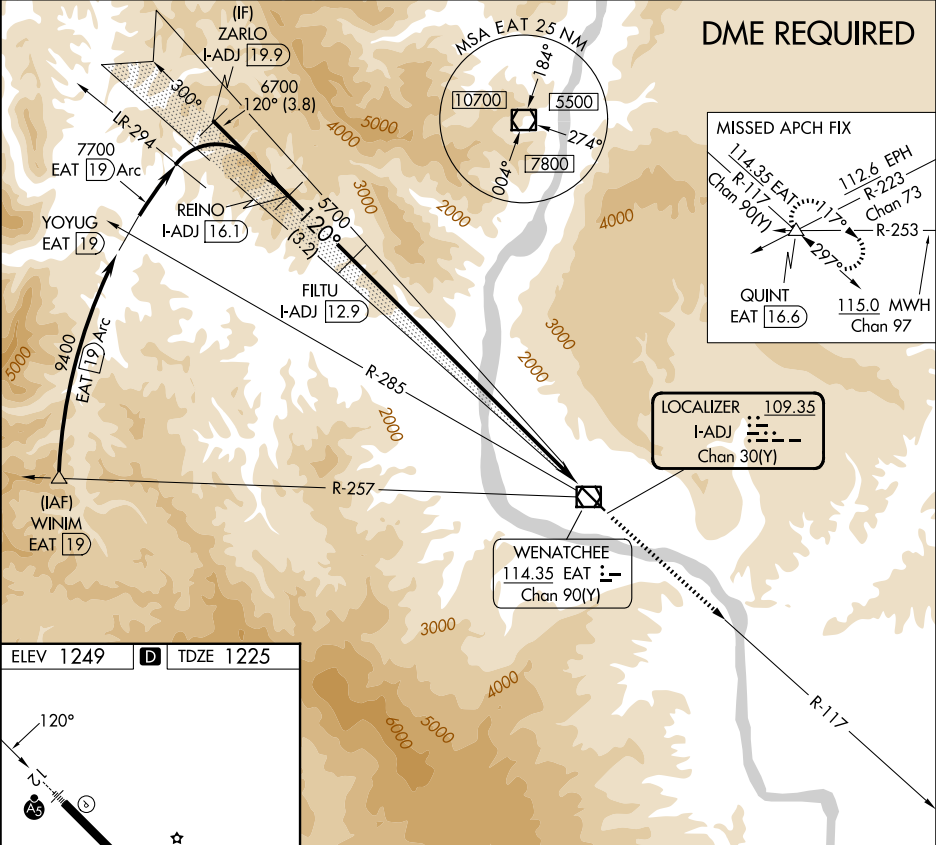

ELEV 1249 TDZE 1225 120° 7000 X 130 7700 6700 5700 5700 ZARLO I-ADJ 19.9 REINO I-ADJ 16.1 FILTU I-ADJ 12.9 2700 4000 EAT EAT R-117 QUINT Use I-ADJ DME when on the localizer course. CATEGORY A B C D S-ILS 12 2433-4 1208 (1200-4) NA
--