

APP CRS
333°

Rwy Ldg
TDZE
Apt Elev

5000
999
1009

RNP APCH.


When local altimeter setting not received, use Bedford altimeter setting and increase all MDAs 200 feet and visibility LNAV Cat C/D ½ SM and visibility Circling Cat B ¼ SM. VDP NA with Bedford altimeter setting.

MISSED APPROACH:
Climbing left turn to 3000
direct GRIPE and hold.

RNAV (GPS) RWY 33

WORCESTER RGNL (ORH)

ATIS 126.55	BRADLEY APP CON 119.0 327.1	WORCESTER TOWER ★ 120.5 (CTAF) 263.0	GND CON 123.85	UNICOM 122.95
-----------------------	---------------------------------------	--	--------------------------	-------------------------

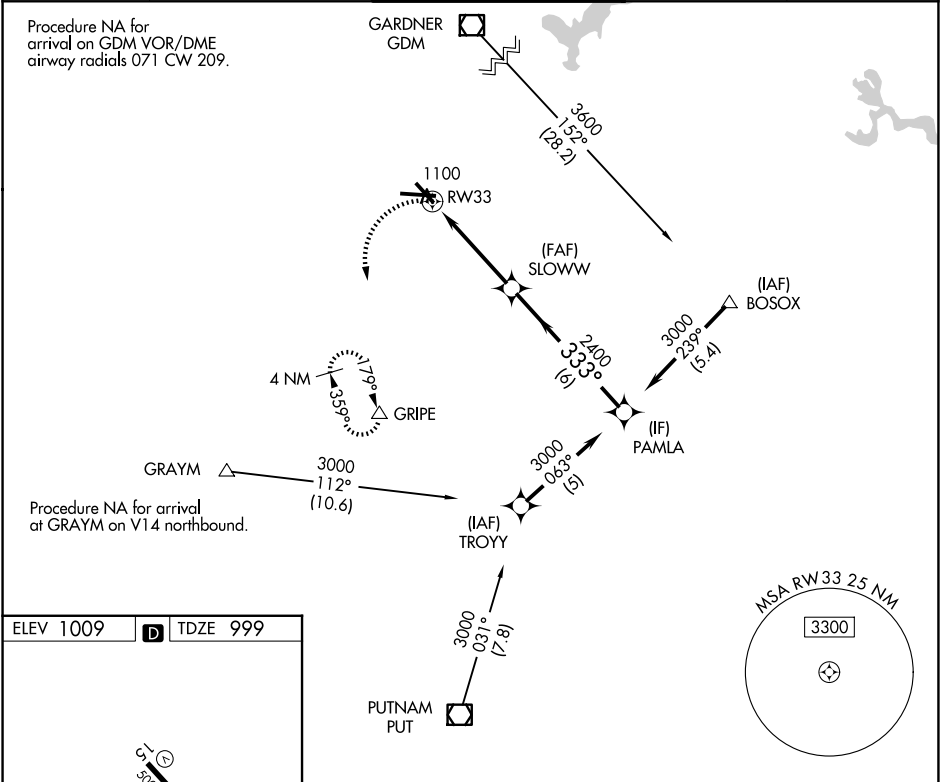

ELEV 1009

D

TDZE 999

TDZL/RCLS Rwy 11

REIL Rws 15, 29 and 33

HIRL Rwy 11-29

MIRL Rwy 15-33

3000	GRIPE	Procedure Turn NA	
1.1 NM to RW33		6 NM	
TCH 40			
CATEGORY	A	B	C
LNAV MDA	1480-1	482 (500-1)	1480 -1⅓ 482 (500-1⅓)
CIRCLING	1560-1 551 (600-1)	1720-1 711 (800-1)	2000-3 991 (1000-3)