

LOC/DME	I-PVO	APP CRS	Rwy Ldg	10001
109.1		128°	TDZE	75
Chan 28			Apt Elev	75




ILS Z or LOC Z RWY 13
ATLANTIC CITY INTL (ACY)

⚠ For inop ALS, increase S-ILS 13 Cat E visibility to RVR 4000 and S-LOC 13 Cat E visibility to 1 3/8 SM.

MALSR

MISSED APPROACH: Climb to 600 then climbing left turn to 2000 on ACY VORTAC R-090 to SMITS INT/ACY 11 DME and hold.

ATIS 125.725 316.15	ATLANTIC CITY APP CON 124.6 327.125	ATLANTIC CITY TOWER 120.3 239.0	GND CON 121.9 284.6
------------------------	--	------------------------------------	------------------------

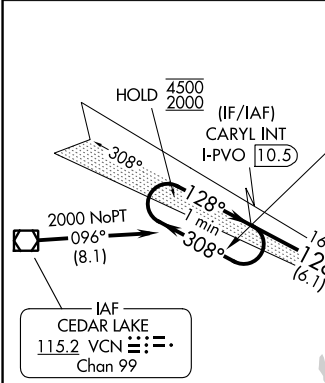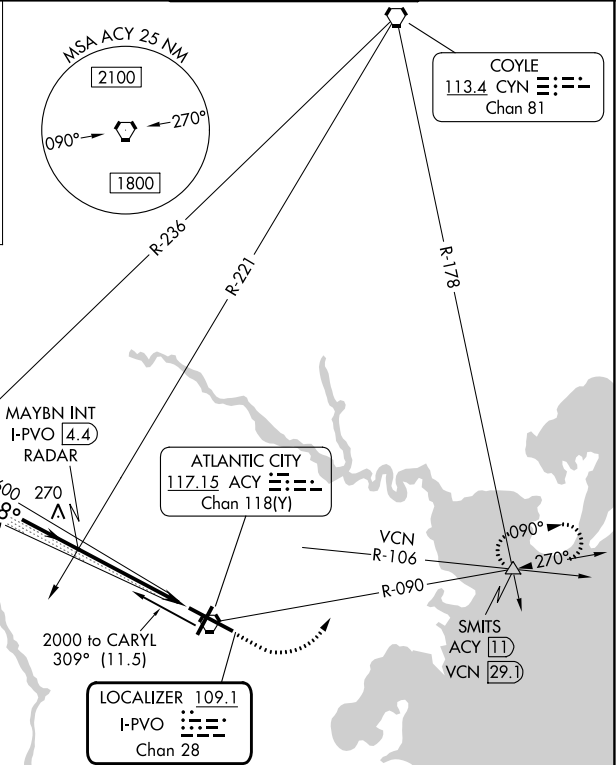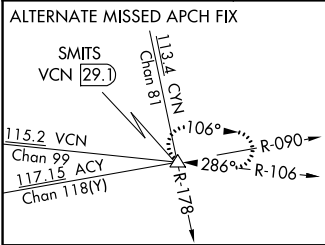

ELEV 75 **D** TDZE 75

TDZL/RCLS Rwy 13
HIRL Rwys 4-22 and 13-31
REIL Rwy 31

FAF to MAP 4.6 NM

Knots	60	90	120	150	180
Min:Sec	4:36	3:04	2:18	1:50	1:32

Use I-PVO DME when on the localizer course.

One Minute Holding Pattern	CARYL INT I-PVO 10.5	MAYBN INT I-PVO 4.4	600	2000	ACY R-090	SMITS
						△

VGSI and ILS glidepath not coincident (VGSI Angle 3.00/TCH 71).

CATEGORY	A	B	C	D	E
S-ILS 13	275/18 200 (200-1/2)				
S-LOC 13	520/24 445 (500-1/2)	520/45 445 (500-2/3)	520/45 445 (500-2/3)	520/45 445 (500-2/3)	520/45 445 (500-2/3)
CIRCLING	540-1 465 (500-1)	600-1 525 (600-1)	620-1 545 (600-1 1/2)	640-2 565 (600-2)	760-2 1/2 685 (700-2 1/2)

NE-2, 01 OCT 2026 to 29 OCT 2026

NE-2, 01 OCT 2026 to 29 OCT 2026