

VORTAC BRO <u>116.3</u> Chan 110	APP CRS 311°	Rwy Ldg 7257 TDZE 36 Apt Elev 36
--	------------------------	---

VOR Y or TACAN RWY 31
VALLEY INTL (HRL)

DME required.


T When local altimeter setting not received, use Port Isabel
A altimeter setting and increase all MDAs 60 feet.

MALSR




MISSED APPROACH: Climbing right turn to 2000 on BRO R-311 to ZOCCKE/12 DME and hold.

ATIS 124.85	VALLEY APP CON 120.7 279.5	HARLINGEN TOWER ★ 119.3 (CTAF) 0 317.6	GND CON 121.7	UNICOM 122.95
-----------------------	--------------------------------------	--	-------------------------	-------------------------

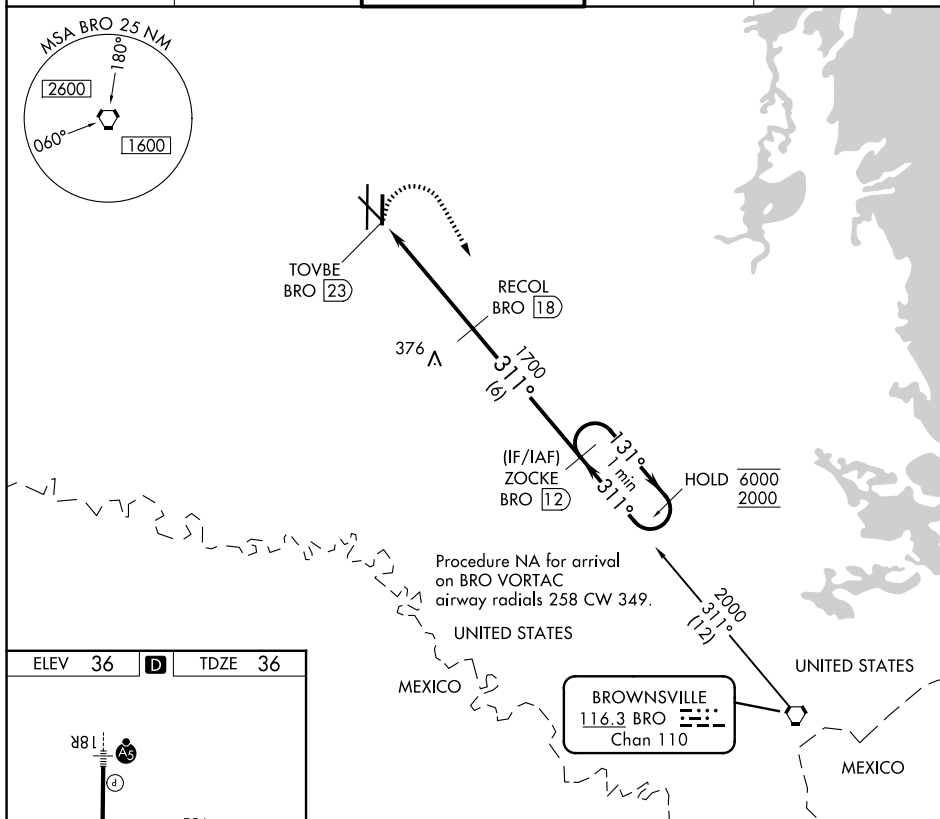

ELEV	36	D	TDZE	36
------	----	----------	------	----

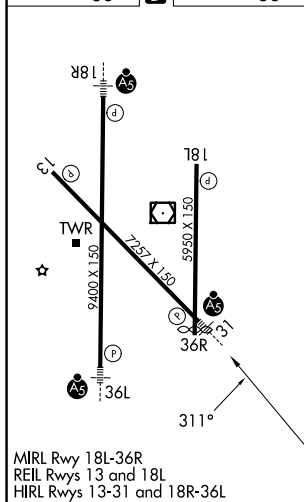

2000

BRO R-311

ZOCKE BRO 12

RECOL BRO 18

TOVBE BRO 23

311°

131°

6000

2000

3.03°

TCH 55

1700

5 NM

6 NM

One Minute Holding Pattern

CATEGORY	A	B	C	D
S-31	1000- $\frac{3}{4}$ 964 (1000- $\frac{3}{4}$)	1000-1 964 (1000-1)	1000-2 $\frac{1}{2}$	964 (1000-2 $\frac{1}{2}$)
CIRCLING	1000-1 $\frac{1}{4}$ 964 (1000-1 $\frac{1}{4}$)	1000-1 $\frac{1}{2}$ 964 (1000-1 $\frac{1}{2}$)	1000-3	964 (1000-3)