

LOC I-TTN	APP CRS	Rwy Idg	6006
111.3	058°	TDZE	186
		Apt Elev	213


ILS or LOC RWY 6
TRENTON MERCER (TTN)

⚠ When Circling to Rwy 34 at night, operational VGSI required, remain on or above VGSI glidepath until threshold.
For inop ALS, increase S-LOC 6 Cat C/D visibility to 1½ SM.


MALSR

MISSED APPROACH: Climb to 1500 then climbing left turn to 2700 direct ARD VOR/DME and hold, continue climb-in-hold to 2700.

ATIS 126.775	PHILADELPHIA APP CON 123.8 291.7	TRENTON TOWER ★ 120.7 (CTAF) 0 257.8	GND CON 121.9 257.8	UNICOM 122.95
-----------------	-------------------------------------	---	------------------------	------------------

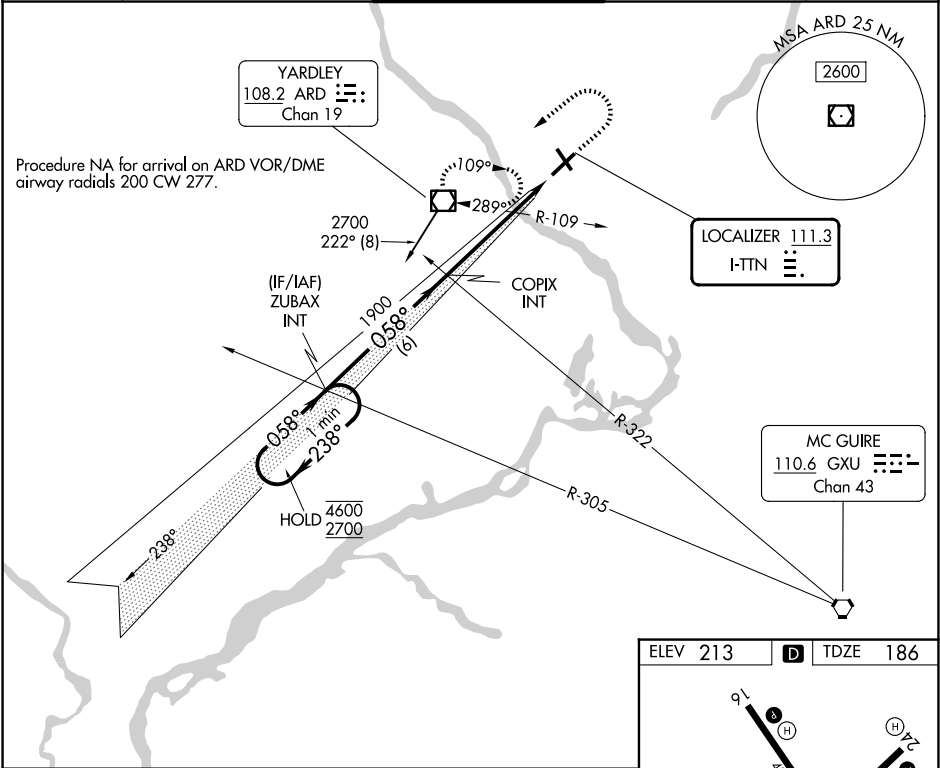

One Minute Holding Pattern		ZUBAX INT	1500	2700	ARD
4600 ← 238°		2700 → 058°	058°	1900	COPIX INT
GS 3.00° TCH 60		1900	6 NM	5.3 NM	
CATEGORY	A	B	C	D	
S-ILS 6	390-½		204 (200-½)		
S-LOC 6	660-½	474 (500-½)	660- 1	474 (500-1)	
CIRCLING	680-1	467 (500-1)	760-1½ 547 (600-1½)	980-2½ 767 (800-2½)	

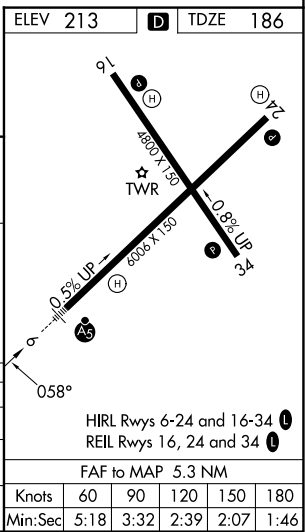

NE-2, 01 OCT 2026 to 29 OCT 2026

NE-2, 01 OCT 2026 to 29 OCT 2026