

ILS or LOC RWY 17
STILLWATER RGNL (SWO)

▼ VDP NA when using Ponca City altimeter setting. When local altimeter setting not received use Ponca City altimeter setting and increase S-LS 17 DA to 1280 feet; increase all MDAs 80 feet and S-LOC 17 visibility Cats C/D $\frac{1}{8}$ SM, and increase Circling Cat C visibility $\frac{1}{4}$ SM and Cat D visibility $\frac{1}{2}$ SM. For non IAPs when using Ponca City altimeter setting, increase S-LS 17 all Cats visibility to $\frac{3}{8}$ SM.

MALSR

A5


⏏

MISSED APPROACH:
Climb to 1500 then climbing
right turn to 3200 direct
GABEH LOM and hold,
continue climb-in-hold to
3200.

Procedure NA for arrival on PER VORTAC
airway radials 110 CW 195.

PIONEER
113.2 PER : - -
Chan 79

3000 to GABEH LOM
167° (30.8)

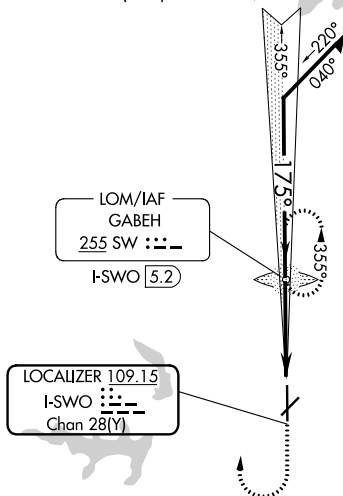


LOM/IAF
GABEH
255 SW ::-
I-SWO 5.2

LOCALIZER 109.15
I-SWO
Chan 28(Y)

MSA SW 25 NM

3100

ALTERNATE MISSED
APCH FIX

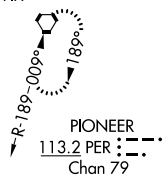

	Knots	60	90	120	150	180
Min:Sec	3:48	2:32	1:54	1:31	1:16	

STILLWATER RGNL (SWO)
ILS or LOC RWY 17