


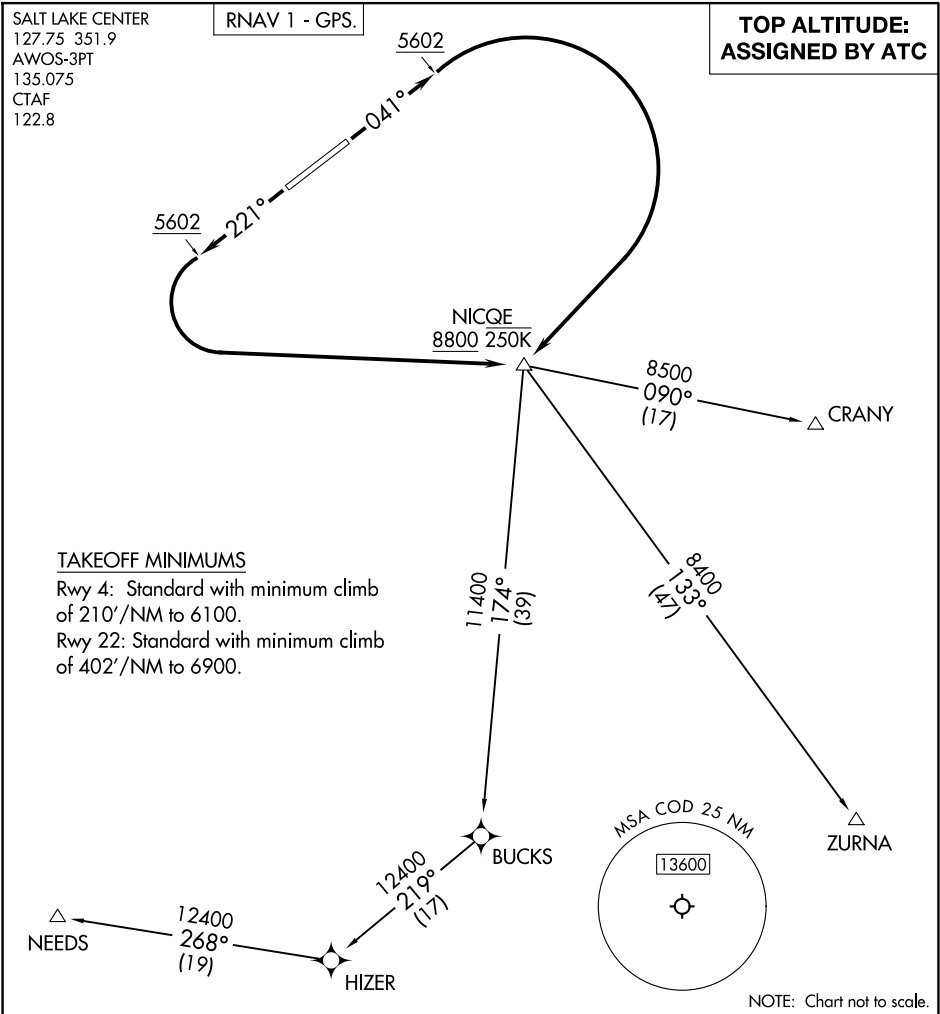

DEPARTURE ROUTE DESCRIPTION
TAKEOFF RUNWAY 4: Climb on heading 041° to 5602, then climbing right turn direct NICQE to cross NICQE at or above 8800 and at or below 250K, thence . . .
TAKEOFF RUNWAY 22: Climb on heading 221° to 5602, then climbing left turn direct NICQE to cross NICQE at or above 8800 and at or below 250K, thence . . .
. . . on transition, maintain ATC assigned altitude.
CRANY TRANSITION (NICQE1.CRANY)
NEEDS TRANSITION (NICQE1.NEEDS)
ZURNA TRANSITION (NICQE1.ZURNA)