
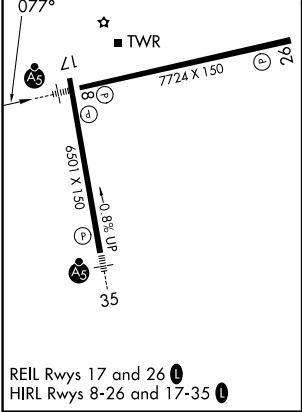


LOC/DME I-CWA 110.3 Chan 40	APP CRS 077°	Rwy Ldg TDZE Apt Elev	7724 1274 1277
---	------------------------	-----------------------------	---

ILS or LOC RWY 8
CENTRAL WISCONSIN (CWA)

DME required. RNP APCH - GPS.		MALSR	MISSED APPROACH: Climb to 3000 direct ASARE and hold.	
For inop ALS, increase S-LOC 8 Cat C and D visibility to 1 SM.				
ATIS 127.45	MINNEAPOLIS CENTER 124.4 317.7	CWA TOWER ★ 119.75 (CTAF) 360.7	GND CON 121.9 360.7	UNICOM 122.95

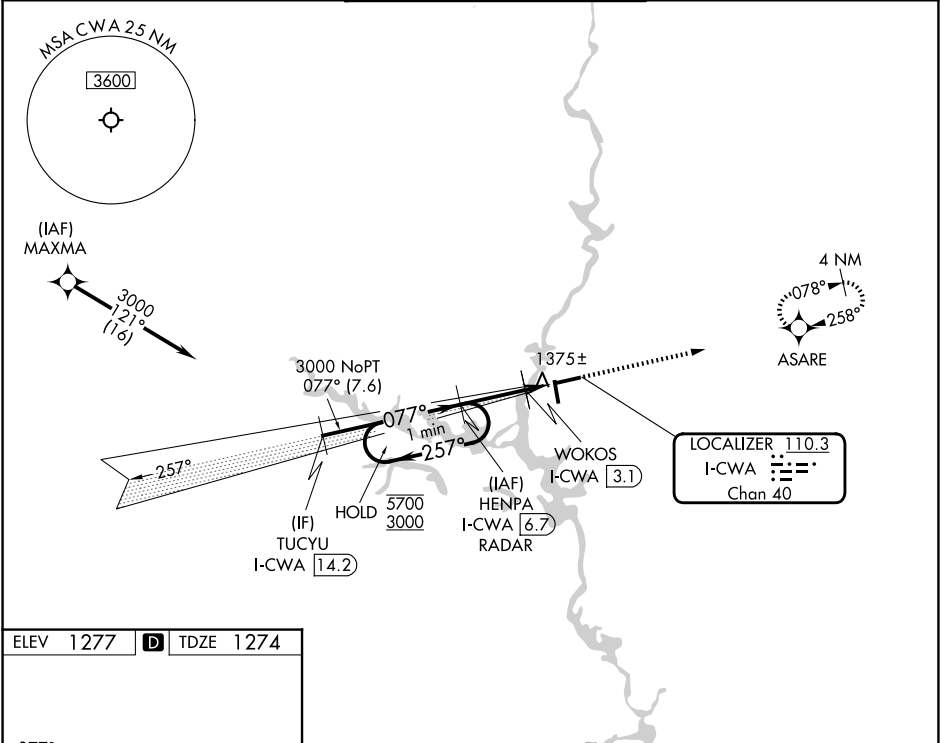

One Minute Holding Pattern		HENPA I-CWA 6.7 RADAR	3000	ASARE
5700 3000		WOKOS I-CWA 3.1	I-CWA 2.4	I-CWA 1.4
GS 3.00° TCH 55		1860		
		3.6 NM	0.7 NM	1 NM
CATEGORY	A	B	C	D
S-ILS 8	1474-½ 200 (200-½)			
S-LOC 8	1640-½	366 (400-½)	1640-⅝	366 (400-⅝)
CIRCLING	1740-1	463 (500-1)	1740-1½ 463 (500-1½)	1840-2 563 (600-2)