SANTA MONICA THREE DEPARTURE (RNAV)


(SMO3.CHOII) 01FEB18

SANTA MONICA, CALIFORNIA
SANTA MONICA MUNI (SMO)

SANTA MONICA TOWER ★
120.1 257.8
SOCAL DEP CON
135.05 317.5 (Rwy 3)
125.2 323.275 (Rwy 21)

NOTE: RNAV 1.
NOTE: DME/DME/IRU or GPS required.
NOTE: RADAR required.
NOTE: All Rwy 21 departures expect RADAR vectors to SEAEM prior to CTRUS.
NOTE: This departure procedure authorized for turboprop aircraft only.

TOP ALTITUDE: ASSIGNED BY ATC

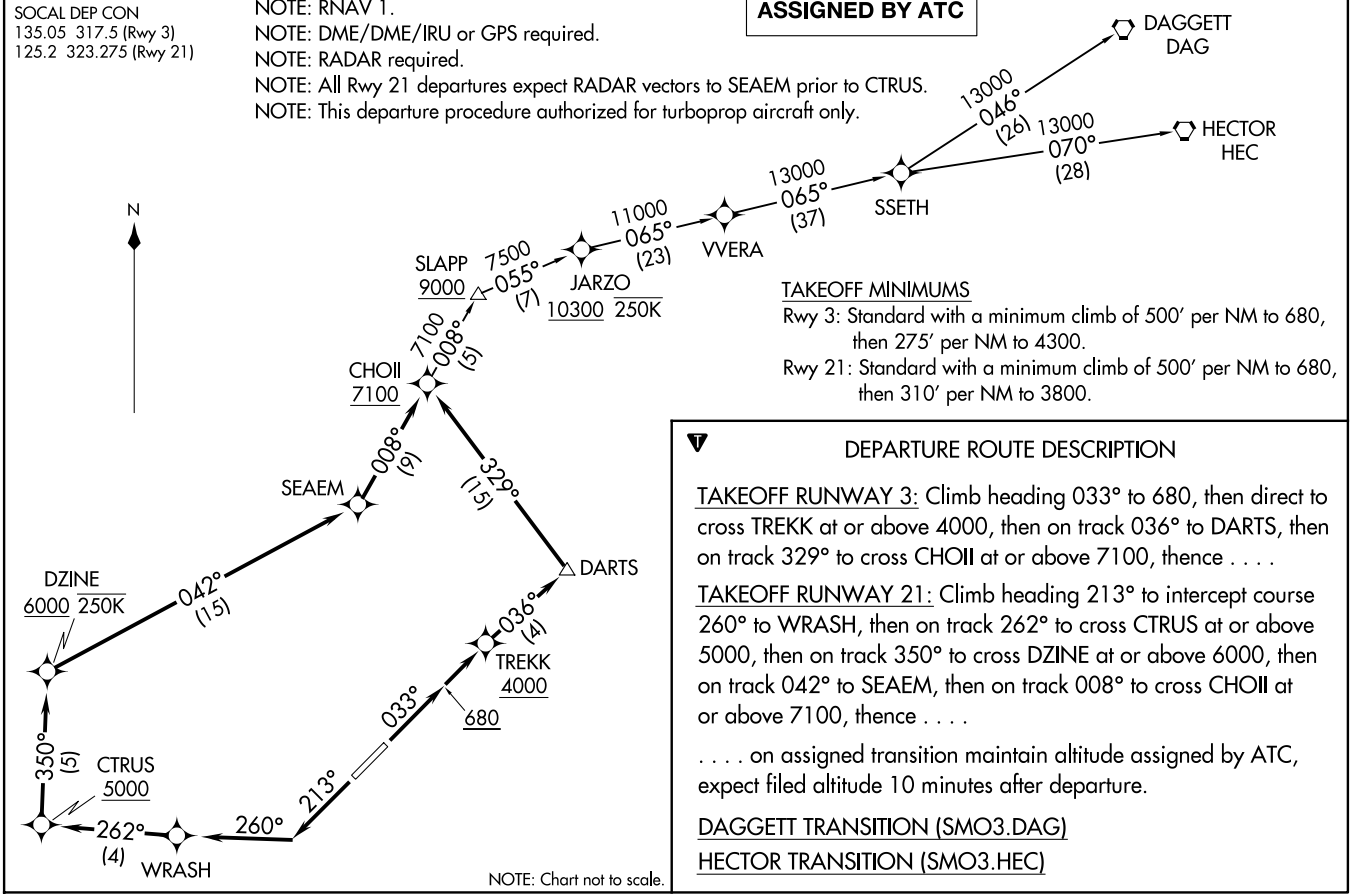

TAKEOFF MINIMUMS

Rwy 3: Standard with a minimum climb of 500′ per NM to 680, then 275′ per NM to 4300.

Rwy 21: Standard with a minimum climb of 500′ per NM to 680, then 310′ per NM to 3800.

DEPARTURE ROUTE DESCRIPTION

TAKEOFF RUNWAY 3: Climb heading 033° to 680, then direct to cross TREKK at or above 4000, then on track 036° to DARTS, then on track 329° to cross CHOII at or above 7100, thence . . . .

TAKEOFF RUNWAY 21: Climb heading 213° to intercept course 260° to WRASH, then on track 262° to cross CTRUS at or above 5000, then on track 350° to cross DZINE at or above 6000, then on track 042° to SEAEM, then on track 008° to cross CHOII at or above 7100, thence . . . .

. . . . on assigned transition maintain altitude assigned by ATC, expect filed altitude 10 minutes after departure.

DAGGETT TRANSITION (SMO3.DAG)

HECTOR TRANSITION (SMO3.HEC)

(SMO3.CHOII) 18032

SANTA MONICA THREE DEPARTURE (RNAV)

SANTA MONICA MUNI (SMO)
SANTA MONICA, CALIFORNIA

AL-5023 (FAA)