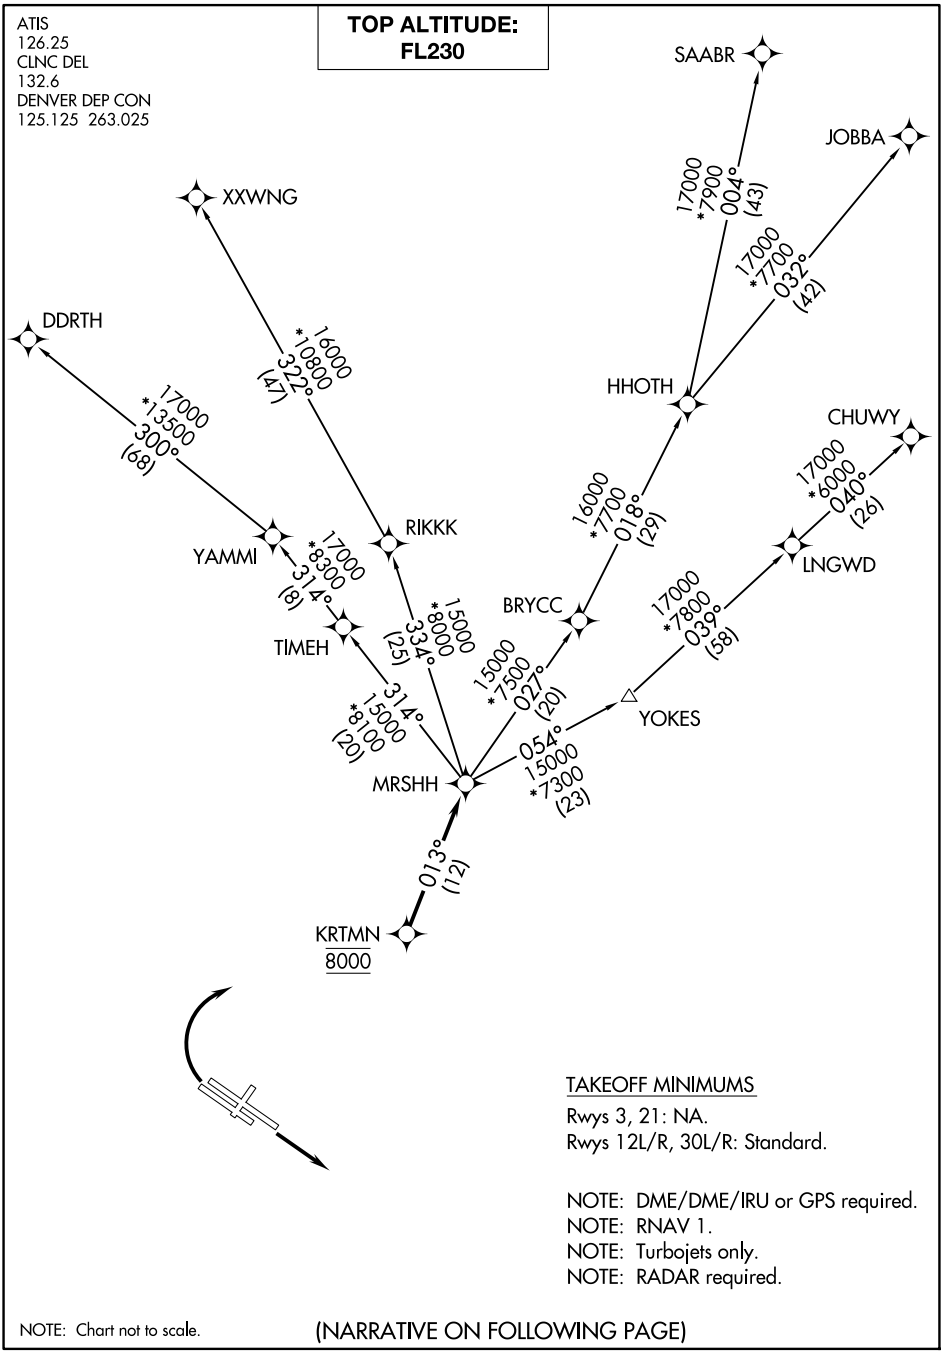


TAKEOFF MINIMUMS

Rwys 3, 21: NA.
Rwys 12L/R, 30L/R: Standard.

NOTE: DME/DME/IRU or GPS required.
NOTE: RNAV 1.
NOTE: Turbojets only.
NOTE: RADAR required.

NOTE: Chart not to scale.

(NARRATIVE ON FOLLOWING PAGE)

SW-1, 29 OCT 2026 to 26 NOV 2026
SW-1, 29 OCT 2026 to 26 NOV 2026

DEPARTURE ROUTE DESCRIPTION

TAKEOFF RUNWAYS 12L/R: Climb on a heading between 350° CW 150° as assigned by ATC. Thence. . . .

TAKEOFF RUNWAYS 30L/R: Climbing right turn on a heading between 350° CW 113° as assigned by ATC. Thence. . . .

. . . .expect RADAR vectors to cross KRTMN at 8000 then on track 013° to MRSHH, then on (transition) maintain FL230 or filed lower altitude. Expect higher filed altitude ten minutes after departure.

CHUWY TRANSITION (MRSHH2.CHUWY)
DDRTH TRANSITION (MRSHH2.DDRTH)
JOBBA TRANSITION (MRSHH2.JOBBA)
SAABR TRANSITION (MRSHH2.SAABR)
XXWNG TRANSITION (MRSHH2.XXWNG)

SW-1, 29 OCT 2026 to 26 NOV 2026