

LIME VILLAGE (2AK) 0 N UTC-9(-8DT) N61°21.55' W155°26.42'

MC GRATH

545 NOTAM FILE ENA

RWY 10-28: 1500X55 (GRVL-DIRT) 0.3% up E**RWY 10:** Brush.**RWY 28:** Brush.

AIRPORT REMARKS: Unattended. Rwy condition not monitored, recommend visual inspection prior to using. NW rwy end floods dur break-up. Thld panel Rwy 10 only. Rwy 10-28 marked with orange 3' cones. Rwy 10-28 irregular sfc loose rocks up to 12 in may be present length of runway. Windssock unreliable.

AIRPORT MANAGER: 907-524-3241**COMMUNICATIONS:** CTAF 122.9**RADIO AIDS TO NAVIGATION:** NOTAM FILE PASV.

SPARREVOHN (H) (H) VOR/DME 117.2 SQA Chan 119 N61°05.91' W155°38.07' 002° 16.7 NM to fld. 2501/18E.

VOR & DME unusable:

009°-019°

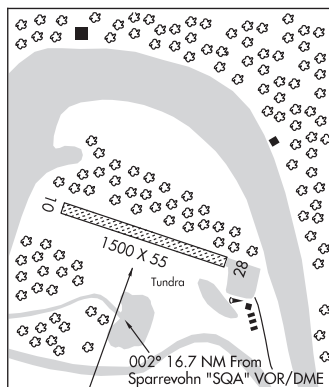
029°-039° byd 25 NM blo 12,500'

DME portion unusable:

019°-028° byd 16 NM

VOR portion unusable:

019°-029° byd 16 NM

COMM/NAV/WEATHER REMARKS: or a toll free call to Kenai FSS dial 1-866-864-1737.**LINCOLN VILLAGE AIRPARK** (See WASILLA on page 262)**LIVNGOOD CAMP** (4AK) 0 E UTC-9(-8DT) N65°28.04' W148°39.22'

FAIRBANKS

428 NOTAM FILE FAI

RWY 15-33: 3000X50 (GRVL) 0.3% up NW**RWY 15:** Trees.**RWY 33:** Trees.

AIRPORT REMARKS: Unattended. Rwy not maintained and condition not monitored, recommend visual inspection prior to landing. Rwy 15 and Rwy 33 NSTD markings, rwy edges marked with cones. Be alert: Watch for frequent helicopter t/c from adjacent work camp.

AIRPORT MANAGER: 907-451-2207**COMMUNICATIONS:** CTAF 122.9**RADIO AIDS TO NAVIGATION:** NOTAM FILE FAI.

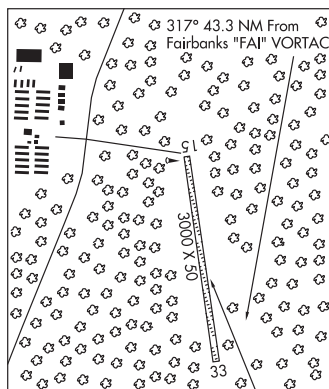
FAIRBANKS (H) (H) VORTACW 108.6 FAI Chan 23 N64°48.00' W148°00.72' 317° 43.3 NM to fld. 1526/21E.

TACAN AZIMUTH unusable:

065°-100° byd 30 NM

270°-330° byd 10 NM blo 10,000'

270°-330° byd 30 NM

COMM/NAV/WEATHER REMARKS: For a toll free call to Fairbanks FSS dial 1-866-248-6516.

L-4J

LLOYD R ROUNDTREE SEAPLANE FACILITY SPB (See PETERSBURG on page 195)**LONELY AS** (AK71) AF 0 N UTC-9(-8DT) N70°54.64' W153°14.53'

POINT BARROW

17 B NOTAM FILE BRW

RWY 07-25: 5000X100 (GRVL) MIRL**RWY 07:** REIL.**RWY 25:** REIL.

MILITARY REMARKS: Unattended. CLOSED TO THE PUBLIC. Bureau of Land Management (BLM) managed facility. All aircraft operators shall obtain written authorization prior to landing. Contact the BLM Arctic Field Office, 1150 University Avenue, Fairbanks, AK 99709 or call 907-474-2200 to apply for an authorization 45 days prior to intended landing. Failure to obtain and have onboard an approved authorization may result in trespass violations and possibly criminal and civil action. CAUTION: Rwy not maintained, recommend visual inspection prior to ldg. Unlighted 150' twr 1/4 NM west of arpt, unlighted 200' twr 1 NM west of arpt. Caribou occasionally on rwy. NOTE: See Notices—Drone Activity at Coastal Airport Launch Sites.

AIRPORT MANAGER: 907-552-4400**COMMUNICATIONS:** CTAF 126.2**COMM/NAV/WEATHER REMARKS:** Local call to Barrow FSS dial 852-2511.

H-1A, L-4I