

**AMBLER** (AFM)(PAFM) 1 N UTC-9(-8DT) N67°06.37' W157°51.43'  
 293 B NOTAM FILE AFM  
**RWY 01-19:** 4000X75 (GRVL-DIRT) MIRL 0.5% up N  
**RWY 01:** PAPI(P4R)—GA 3.0° TCH 25'. Trees.  
**RWY 19:** Trees.

**RWY 10-28:** 2400X60 (GRVL-DIRT) MIRL 1.1% up W  
**SERVICE:** LGT ACTIVATE PAPI Rwy 01; MIRL Rwy 01-19 and Rwy 10-28; windsock lgts—CTAF. ACTIVATE rotating bcn—CTAF.

**AIRPORT REMARKS:** Unattended. Rwy conditions not monitored, recommend visual inspection prior to using. Caribou invof rwys. Rwy 01-19 rwy surface is compacted gravel, rock and dirt. Rwy 10-28 rwy surface is compacted gravel, rock and dirt. Cold temperature airport. Altitude correction required at or below -36C. Rwy 01-19 crowns in center and no line of sight between rwy ends. Rwy 10-28 slopes uphill east to west approximately 80'.

**AIRPORT MANAGER:** 907-442-3147

**WEATHER DATA SOURCES:** AWOS-3P 132.1 (907) 445-2146. (WX CAM)

**COMMUNICATIONS:** CTAF 122.7

**RCO 122.0** (KOTZEBUE RADIO)


**ANCHORAGE CENTER APP/DEP CON 119.2**

**RADIO AIDS TO NAVIGATION:** NOTAM FILE OTZ.

**KOTZEBUE (H) (H) VORW/DME 115.7** OTZ Chan 104 N66°53.14' W162°32.40' 066° 111.1 NM to fld. 121/15E.

**NDB (HW) 403** AMF N67°06.31' W157°51.61' at fld. 258/15E. NOTAM FILE AFM.

**COMM/NAV/WEATHER REMARKS:** For a LC to Kotzebue FSS dial 907-442-3310. For a toll free call to Kotzebue FSS dial 1-800-478-7460. For a toll free call to Fairbanks FSS dial 1-866-248-6515.

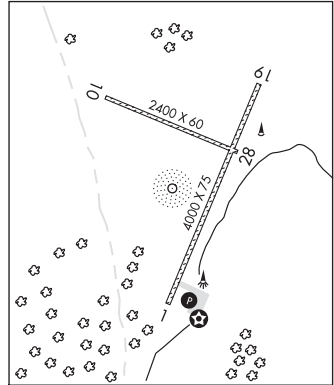

**FAIRBANKS**  
**H-1A, L-4I**  
**IAF**

**ANAKTUVUK CREEK** (8ØA) 0 N UTC-9(-8DT) N65°06.24' W151°10.63'  
 513 NOTAM FILE FAI

**RWY 02-20:** 1500X70 (TURF-GRVL) 1.3% up N

**RWY 02:** Tree.

**RWY 20:** Tree.

**AIRPORT REMARKS:** Unattended. Be alert winds erratic. Be alert, rwy used as road by mining equipment. Heavy equipment and drag line boom invof rwy, recommend flyby before ldg. No line of sight between rwy ends. Rocks up to 6" in diameter.

**COMMUNICATIONS:** CTAF 122.9

**FAIRBANKS**

**ANAKTUVUK PASS** (AKP)(PAKP) 0 SE UTC-9(-8DT) N68°08.02' W151°44.60'  
 2106 B NOTAM FILE AKP

**RWY 02-20:** 4800X100 (GRVL) MIRL 1.1% up NE

**RWY 02:** REIL. PAPI(P2L)—GA 3.0° TCH 41'. Brush.

**RWY 20:** REIL. PAPI(P2L)—GA 3.0° TCH 40'. Brush.

**SERVICE:** LGT ACTIVATE MIRL Rwy 02-20, REIL and PAPI Rwy 02 and 20, and rotating bcn—CTAF.

**AIRPORT REMARKS:** Attended continuously. Rwy 02-20 ALERT: Lctd in valley, high trrn all quads, exp turb wind, rcmd visual insp prior to use. Cold temperature airport. Altitude correction required at or below -30C.

**AIRPORT MANAGER:** (907) 852-0489

**WEATHER DATA SOURCES:** AWOS-3P 135.75 (907) 661-3020. (WX CAM)

**COMMUNICATIONS:** CTAF/UNICOM 122.8

**ANAKTUVUK PASS RCO 122.15** (FAIRBANKS RADIO)

Ⓡ **ANCHORAGE CENTER APP/DEP CON 124.6** 352.0


**RADIO AIDS TO NAVIGATION:** NOTAM FILE BTT.

**BETTLES (H) (H) VORW/DME 116.0** BTT Chan 107 N66°54.30' W151°32.15' 336° 74.1 NM to fld. 637/20E.

VOR AZIMUTH & DME unusable:

047°-077° byd 24 NM

**COMM/NAV/WEATHER REMARKS:** For a toll free call to Fairbanks FSS dial 1-866-248-6516.

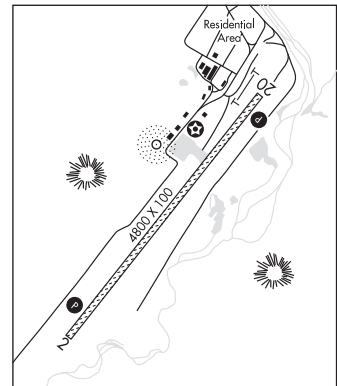

**POINT BARROW**  
**H-1A, L-4I**  
**IAF**