

CENTRAL (CEM)(PACE) 0 NNE UTC-9(-8DT) N65°34.44' W144°46.85'

DAWSON

937 B NOTAM FILE FAI

L-4J

RWY 08-26: 2782X60 (GRVL-DIRT) MIRL 0.7% up W

IAP

RWY 08: Thld dsplcd 121'. Brush.

RWY 26: Brush.

SERVICE: LGT ACTVT MIRL Rwy 08-26—CTAF.

AIRPORT REMARKS: Unattended. Rwy condition not monitored, recommend visual inspection prior to ldg. Grass on rwy sfc up to 12 in tall. Snow removal ops dur winter monitor CTAF. Rwy 08 dsplcd thld marked with blue lgts and reflectors.

AIRPORT MANAGER: 907-451-5280

COMMUNICATIONS: CTAF 122.9

Ⓡ **ANCHORAGE CENTER APP/DEP CON** 135.0

SUAIS 125.3 126.3 (1-800-758-8723).

RADIO AIDS TO NAVIGATION: NOTAM FILE FYU.

FORT YUKON (H) (H) VORTACW 114.4 FYU Chan 91 N66°34.46'
W145°16.60' 148° 61.4 NM to fld. 449/20E.

VOR unusable:

001°-360° byd 15 NM

249°-259° byd 10 NM blo 4,900'


TACAN AZIMUTH unusable:

280°-300° byd 35 NM blo 2,500'

DME unusable:

280°-300° byd 35 NM blo 2,500'

COMM/NAV/WEATHER REMARKS: For a toll free call to Fairbanks FSS dial 1-866-248-6516.

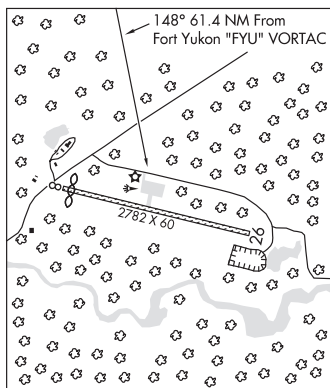

CHALKYITSIK (CIK)(PACI) 0 SW UTC-9(-8DT) N66°38.70' W143°44.39'

DAWSON

549 B NOTAM FILE FAI

H-1B, L-4J

RWY 04-22: 4000X75 (GRVL-DIRT) MIRL

IAP

RWY 04: Trees.

RWY 22: Thld dsplcd 500'. Trees.

SERVICE: LGT ACTIVATE beacon—CTAF. ACTVT MIRL Rwy 04-22—CTAF.

AIRPORT REMARKS: Unattended. Rwy cond not monitored; recommend visual inspection prior to landing. Rwy 04-22 soft when wet. East ramp entrance unlit. East ramp entrance reflectors 36 inches tall. Snow removal ops dur winter, monitor CTAF. Rwy 22 dsplcd thld marked with lgts and reflectors.

AIRPORT MANAGER: (907) 451-5280

COMMUNICATIONS: CTAF 122.9

Ⓡ **ANCHORAGE CENTER APP/DEP CON** 135.0

RADIO AIDS TO NAVIGATION: NOTAM FILE FYU.

FORT YUKON (H) (H) VORTACW 114.4 FYU Chan 91 N66°34.46'
W145°16.60' 063° 37.0 NM to fld. 449/20E.

VOR unusable:

001°-360° byd 15 NM

249°-259° byd 10 NM blo 4,900'

TACAN AZIMUTH unusable:

280°-300° byd 35 NM blo 2,500'

DME unusable:

280°-300° byd 35 NM blo 2,500'

COMM/NAV/WEATHER REMARKS: For a toll free call to Fairbanks FSS dial 1-866-248-6516.

