

LOC	I-LMJ	APP CRS	Rwy Idg	11001
	110.7	218°	TDZE	964
			Apt Elev	964

ILS or LOC RWY 22

GREENVILLE SPARTANBURG INTL (GSP)

▼



▲

When local altimeter setting not received, use Greenville Downtown altimeter setting: increase DA to 1193; increase all MDAs 40 feet and visibility S-LOC 22 Cats C and D to RVR 3500 and Circling Cat D ¼ SM. For inop ALS, increase S-LOC 22 Cat C/D visibility to RVR 5500.

MALSR

MISSED APPROACH: Climb to 2000 then climbing left turn to 3000 direct SPA VORTAC and hold.

ATIS	GREER APP CON★	GREER TOWER★	GND CON	CLNC DEL	UNICOM
134.25	118.8 270.275	120.1(CTAF) 251.15	121.9	121.9	122.95

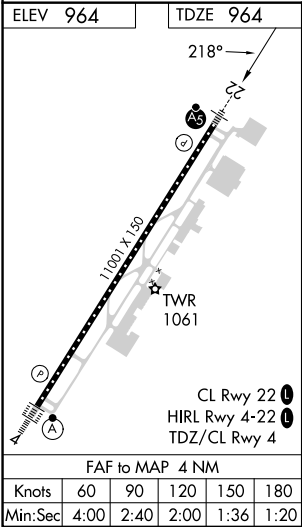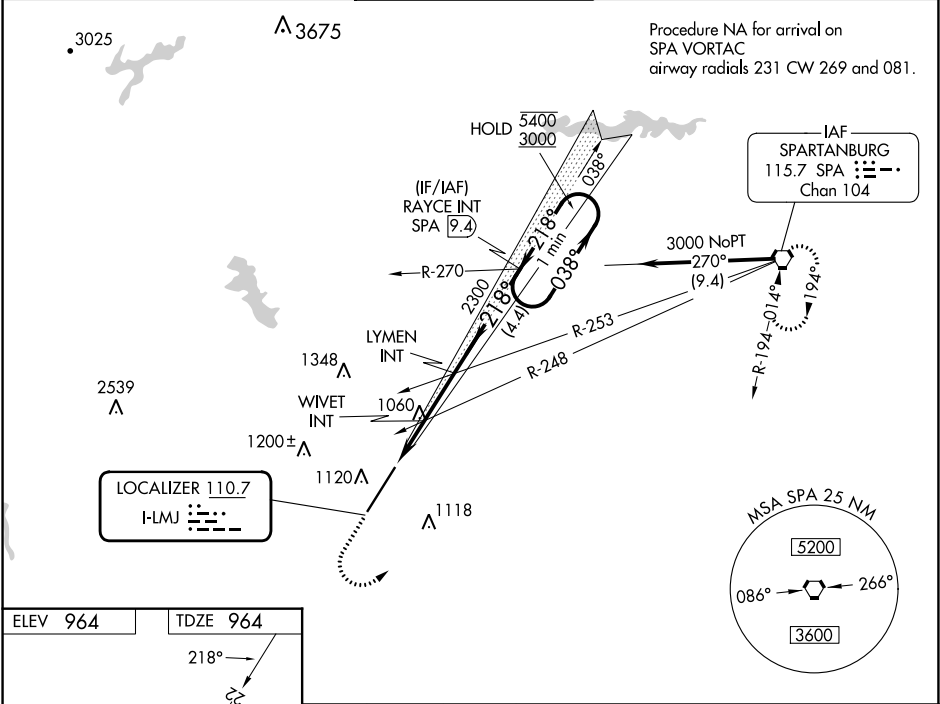

2000 ↑		3000 ↙	SPA 	VGSI and ILS glidepath not coincident (VGSI Angle 3.00/TCH 76).		One Minute Holding Pattern	
*LOC only.				WIVET INT	LYMEN INT 2300	RAYCE INT SPA 9.4	