


MIAMI DEP CON  
 125.5 354.1  
 (GWAVA, KETLL, MAYNR)  
 126.85 290.325  
 (ALTNN, BEECH, BNGOS, DORRL,  
 FOLZZ, FLMGO, HURCN, ZFP)  
 ATIS  
 135.475  
 GND CON  
 120.45 254.3  
 NORTH PERRY TOWER\*  
 132.1 (CTAF) 254.3

RADAR and DME required.

**TOP ALTITUDE: AS  
 ASSIGNED BY ATC**

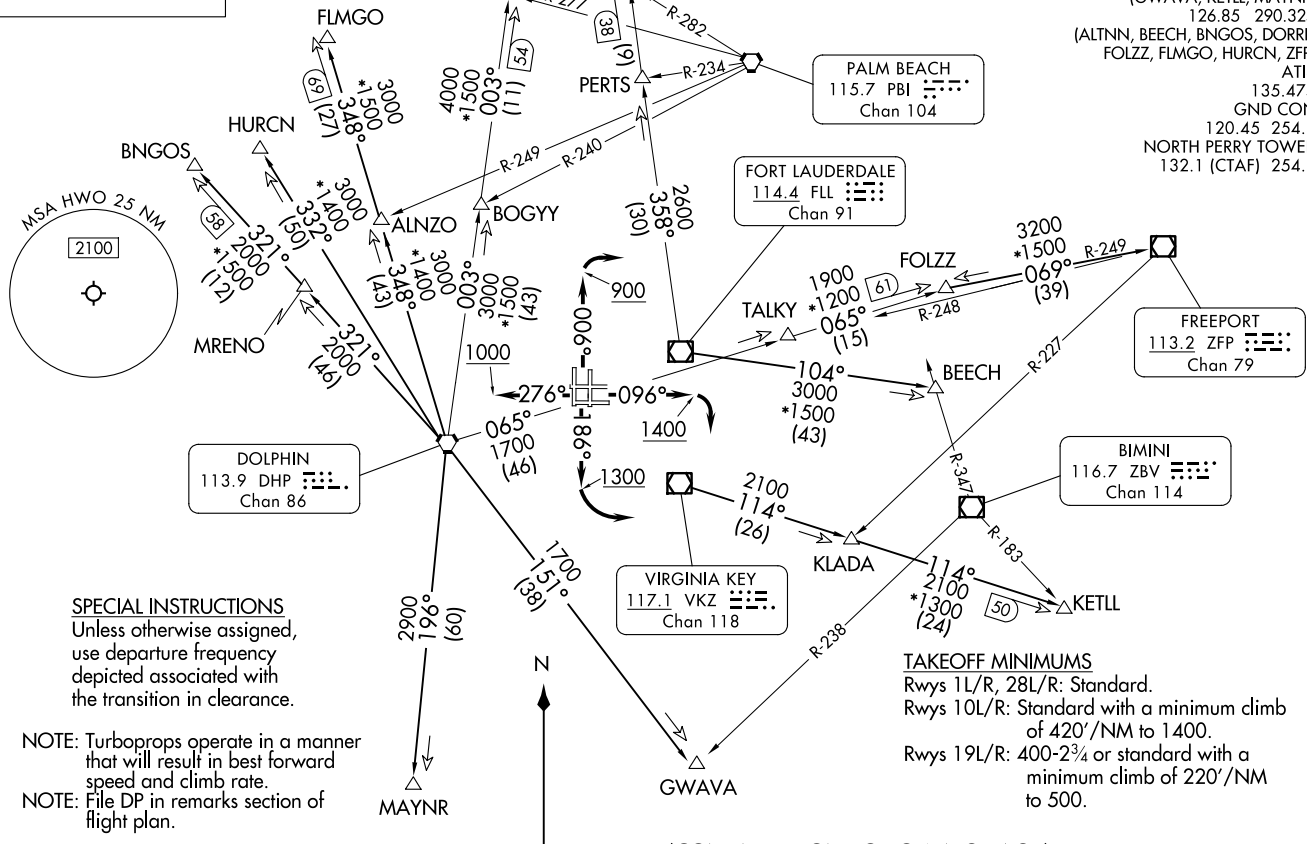

(CONTINUED ON FOLLOWING PAGE)



DEPARTURE ROUTE DESCRIPTION

TAKEOFF RUNWAYS 1L/R: Climb on heading 006° to 900 before turning right, thence...  
TAKEOFF RUNWAYS 10L/R: Climb on heading 096° to 1400 before turning right, thence...  
TAKEOFF RUNWAYS 19L/R: Climb on heading 186° to 1300 before turning left, thence...  
TAKEOFF RUNWAYS 28L/R: Climb on heading 276° to 1000, thence...

... on transition, maintain ATC assigned altitude. Expect filed altitude 10 minutes after departure.

- ALTNN TRANSITION (MIA2.ALTNN): From over FLL VOR/DME on FLL R-358 to ALTNN.
- BEECH TRANSITION (MIA2.BEECH): From over FLL VOR/DME on FLL R-104 to BEECH.
- BNGOS TRANSITION (MIA2.BNGOS): From over DHP VORTAC on DHP R-321 to BNGOS.
- DORRL TRANSITION (MIA2.DORRL): From over DHP VORTAC on DHP R-003 to DORRL.
- FLMGO TRANSITION (MIA2.FLMGO): From over DHP VORTAC on DHP R-348 to FLMGO.
- FOLZZ TRANSITION (MIA2.FOLZZ): From over DHP VORTAC on DHP R-065 to FOLZZ.
- FREEPORT TRANSITION (MIA2.ZFP): From over DHP VORTAC on DHP R-065 to FOLZZ then on ZFP R-249 to ZFP VOR/DME.
- GWAVA TRANSITION (MIA2.GWAVA): From over DHP VORTAC on DHP R-151 to GWAVA.
- HURCN TRANSITION (MIA2.HURCN): From over DHP VORTAC on DHP R-332 to HURCN.
- KETLL TRANSITION (MIA2.KETLL): From over VKZ VOR/DME on VKZ R-114 to KETLL.
- MAYNR TRANSITION (MIA2.MAYNR): From over DHP VORTAC on DHP R-196 to MAYNR.