


WAAS CH 77548 W11A	APP CRS 105°	Rwy Ldg TDZE Apt Elev	3001 18 22
--	------------------------	-----------------------------	---------------------------------------

RNAV (GPS) RWY 11

SCAMMON BAY (SCM) (PACM)

RNP APCH - GPS.		MISSED APPROACH: Climb to 440, then climbing left turn to 2900 direct ZATEV then on track 252° to JTSKI and hold.
T A ❄️ -20°C <td>Circle NA south of Rwy 11-29. Circle Rwy 29 NA at night. VDP NA when using VAK/PAVA altimeter setting. When local altimeter setting not received, use VAK/PAVA altimeter setting and increase all MDAs 60 feet.</td>	Circle NA south of Rwy 11-29. Circle Rwy 29 NA at night. VDP NA when using VAK/PAVA altimeter setting. When local altimeter setting not received, use VAK/PAVA altimeter setting and increase all MDAs 60 feet.	

AWOS-3P 118.425	ANCHORAGE CENTER 124.5	UNICOM 123.0 (CTAF) 0
---------------------------	----------------------------------	---------------------------------

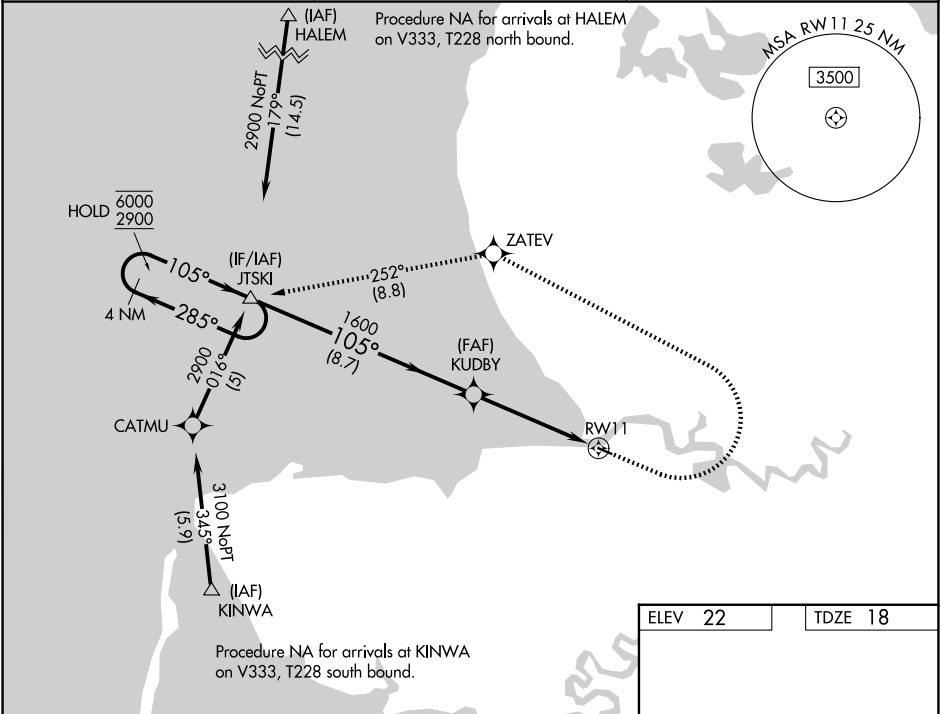

4 NM Holding Pattern		JTSKI	440	2900	ZATEV	tr 252°	JTSKI					
6000 ← 285°		105° →	KUDBY		1 NM to RW11	RW11						
2900		105°	3.00° TCH 40									
		105°	8.7 NM		3.8 NM	1 NM						
CATEGORY	A	B	C	D								
LP MDA	380-1	362 (400-1)	NA									
LNAV MDA	1100-1¼ 1082 (1100-1¼)	1100-1½ 1082 (1100-1½)	NA									
CIRCLING	1100-1¼ 1078 (1100-1¼)	1100-1½ 1078 (1100-1½)	NA									

ELEV 22

TDZE 18

MIRL Rwy 11-29 0