


LOC I-SBD	APP CRS	Rwy Ldg	10000
109.3	057°	TDZE	1103
		Apt Elev	1159

ILS or LOC Z RWY 6
SAN BERNARDINO INTL (SBD)

⚠ Circling NA northwest of Rwy 6-24. When local altimeter setting not received, use Ontario altimeter setting and increase DA to 1426 feet and all visibilities ¼ SM; increase all MDA 80 feet and S-LOC Cats C/D and Circling Cat C visibility ¼ SM.

MISSED APPROACH: Climb to 2000 then climbing right turn to 6000 direct PDZ VORTAC and hold, continue climb-in-hold to 6000.
* Missed approach requires minimum climb of 340 feet per NM to 4000; if unable to meet climb gradient, see LOC Y RWY 6.

D-ATIS 124.175	SOCAL APP CON 127.0 318.2	SAN BERNARDINO TOWER ★ 119.45 (CTAF) 0	GND CON 121.8	UNICOM 122.975
-------------------	------------------------------	---	------------------	-------------------

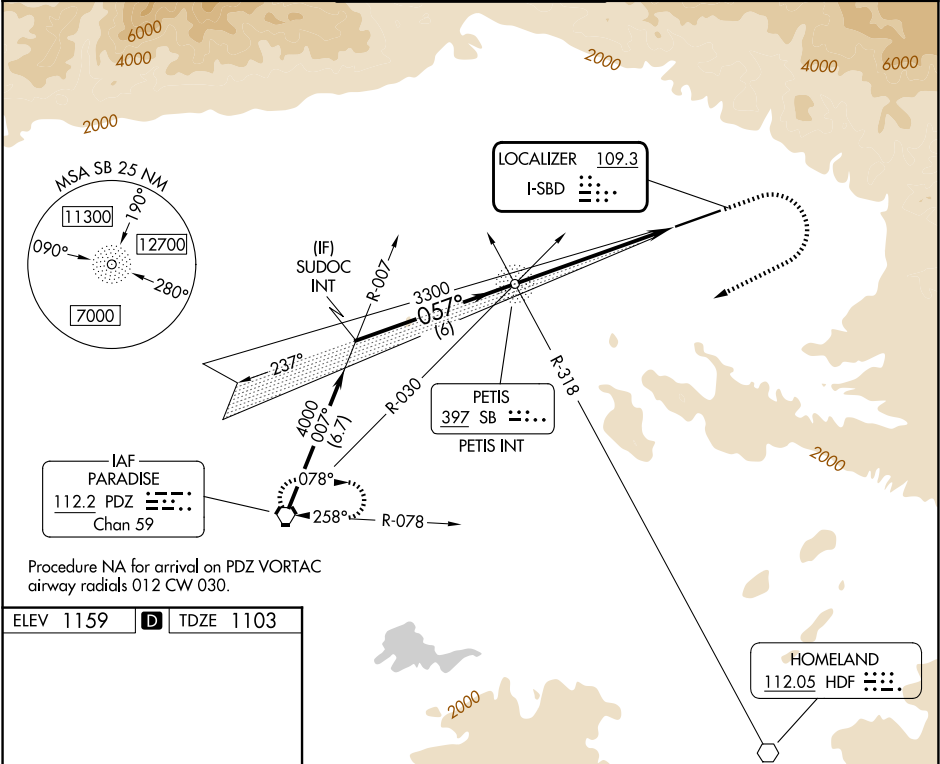

ELEV 1159 **D** TDZE 1103

HIRL Rwy 6-24 **1**
REIL Rwy 6 and 24 **1**

FAF to MAP 6.1 NM

Knots	60	90	120	150	180
Min:Sec	6:06	4:04	3:03	2:26	2:02

SUDOC INT				SB NDB PETIS INT				2000 ↑		6000 		PDZ 	
4000				057°				3118		3300			
GS 3.00° TCH 51				6 NM				6.1 NM					
CATEGORY		A		B		C		D					
S-ILS 6 *				1353- ³ / ₄		250 (200- ³ / ₄)							
S-LOC 6 *		1740-1		637 (600-1)		1740-1 ³ / ₄		637 (600-1 ³ / ₄)					
CIRCLING		1740-1		581 (600-1)		1760-1 ³ / ₄ 601 (700-1 ³ / ₄)		2640-3 1481 (1500-3)					